

# AVerVision SPC 300 Quick Reference Guide

## Control Panel



### Capturing an Image

- Place object inline with camera head
- Press CAPTURE button
- Image is now captured!

### View Captured Images

- Press PLAYBACK button
- Screen will display images as thumbnails
- Move to desired image by using arrow keys
- To enlarge image to full screen, press ENTER or FULL SCREEN
- To return to screen with images as thumbnails, press PLAYBACK
- To return back to document camera mode, press CAMERA button

### AVerBox

- AVerBox overlays a frame on the presentation screen.
- To access, press BOX
- The size and color of box can be modified (see row of buttons below BOX button)
- Area outside of box can be shaded by pressing SHADE

## Camera Remote



### Zoom

- Turn zoom shuttle counter-clockwise to zoom in and clockwise to zoom out
- Optical and AVerZoom are used first, followed by digital
- User can Pan with arrow keys once past optical zoom

### Deleting Captured Images

- Press PLAYBACK
- Select desired image with arrow keys
- Press MENU
- Select DELETE
- Press ENTER and select YES

### Delete all images at Once

- Press CAMERA
- Press MENU button
- Select SETTINGS (Press right arrow key)
- Select MEMORY
- Select FORMAT and YES

### Rotate Image 90°

- Press ROTATE

### AVerVisor

- AVerVisor covers part of the presentation screen
- To access, press VISOR
- Level of shade can be adjusted by Pressing SHADE (below VISOR button)

**AVerMedia**

SK 05/13/08

A training video for the SPC 300 can be viewed at:  
<http://www.avermedia-usa.com/presentation/videos.asp>