

For User Manual and Software, please visit the link below. <u>http://averusa.com/classroom-technology/support/</u>

For Warranty information, please visit the link below. http://www.averusa.com/classroom-technology/support/warranty.asp

	 7. Basis Operation Press (+) to zoom in and (=) to zoom out the image.
	 Press () to adjust the focus automatically.
	 Press CAMERA / PC1/PC2 to switch between Camera and Computer mode. For laptop, make sure to switch the output display to an external video output device. Refer to the laptop keyboard command (FN+F5) to switch between display outputs.
2	 Press to view the captured image from the memory.
7	 Press to pause or resume the live image from the camera or stop video playback.
	 Press to capture and save the image in the built-in memory. In playback mode, use this to delete the selected file.
7	
7	 Press to start/stop audio & video recording with either USB flash drive or SD memory card. If USB flash drive is used, make sure switch is set to the left.