


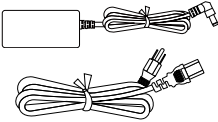
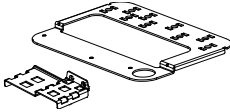
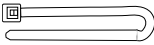



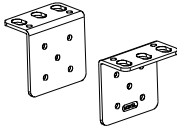
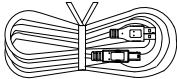

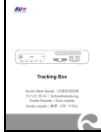

MT300

Matrix Tracking Box

Quick Start Guide | 快速使用指南
クイック・ガイド | Schnellanleitung
Guide Rapide | Guía rápida
Guida rapida | 빠른 시작 가이드




English	1
繁體中文.....	15
日本語	15
Deutsch.....	22
Français	29
Español	36
Italiano	43
한국어.....	50

Package Contents


Tracking Box Unit	Power Adapter & Power Cord	Cable Fixing Plate (x2)	Cable Ties (x13)
			
3.0 x 5mm Flat Head Screw (x5)	3.0 x 5mm Truss Head Screw (x4)	M3 x 10mm Screws (x4)	Rack Mount Bracket (x2)
			
USB 3.0 Cable (x2) Length: 1.5 m/4.92 ft	RS-422 Cable	Quick Start Guide	Warranty Card*
			

*Only for Japan

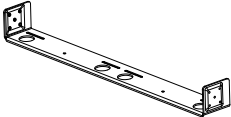Optional Accessories


Server Rack Mount	3.0 x 5mm Flat Head Screw (x3)	3.0 x 5mm Truss Head Screw (x2)
		

Overview

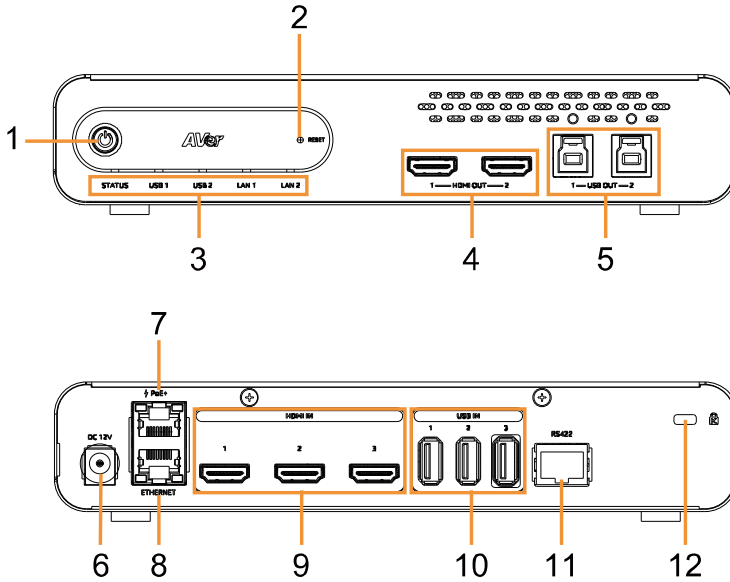


- | | |
|---|--------------------------------|
| 1. Power Button | 7. PoE+ Port IEEE 802.3AT |
| 2. Reset Button | 8. Ethernet Port |
| 3. Status LEDs | 9. HDMI In Port*3 |
| 4. HDMI Out Port*2 | 10. USB In 2.0 Port (Type A)*3 |
| 5. USB Out 3.0 Port (Type B)*2
(Only 1 USB output each time) | 11. RS-422 Port |
| 6. DC Power Jack | 12. Kensington Lock |

Dimensions

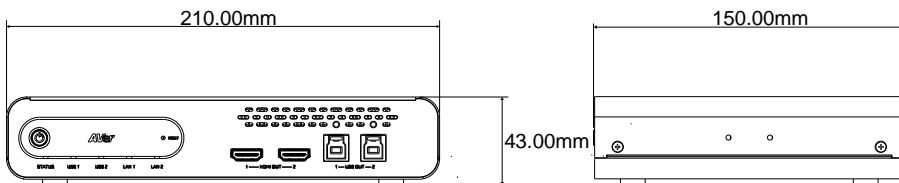

LED Indicator

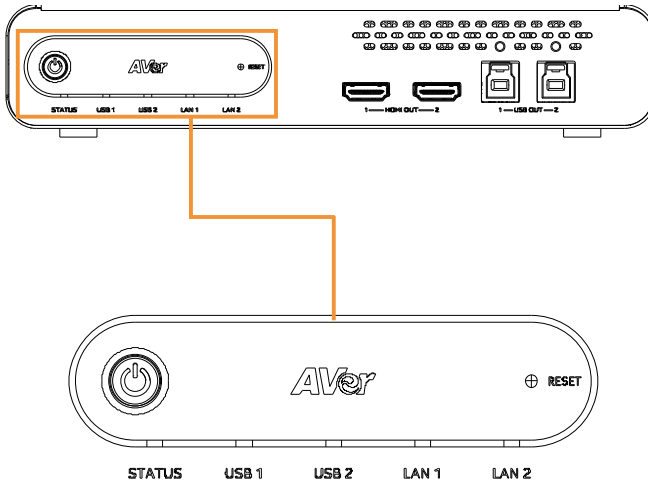

STATUS (Power / System)

LED	Status
Orange (Solid)	Powered on but not Operating
Green (Solid)	Operating Successfully
Green (Flashing)	Firmware Updating

USB 1 / USB 2


LED	Status
Green (Solid)	Connected and Ready for UVC / UAC Streaming
Green (Flashing)	Streaming in UVC / UAC

LAN 1/ LAN 2


LED	Status
Green (Solid)	Ethernet Connected

Cable Fixing Plate Installation


1. Secure the cable fixing plates to the tracking box with 5 flat hat 30 x 5mm screws in the package.

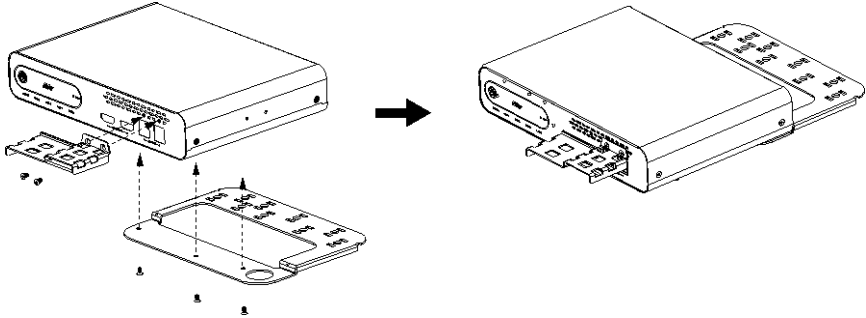

2. Plug in cables.

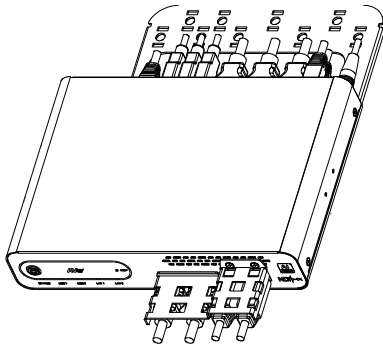


3. Use 13 cable ties in the package to secure the cables and cable fixing plates.

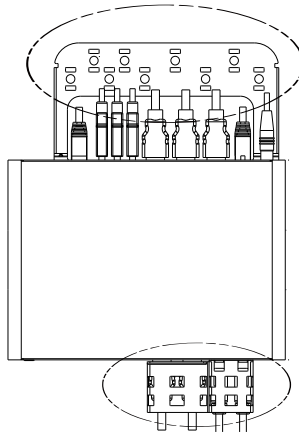


Desk Mount Installation

1. Secure the mount brackets on the tracking box.
Screw: 4 truss head screws, 30 x 5mm

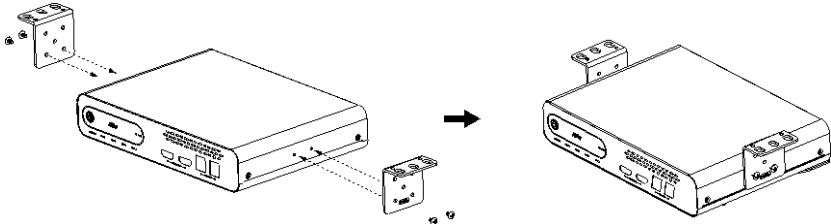


2. Install the mount brackets and the tracking box under the desk.
Screw: 4 screws, M3 x 10mm

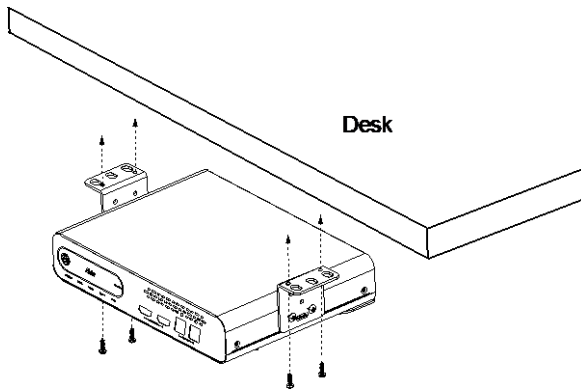


Server Rack Mount Suggestions (Optional Accessories)

For details on optional accessories, consult your local dealer.

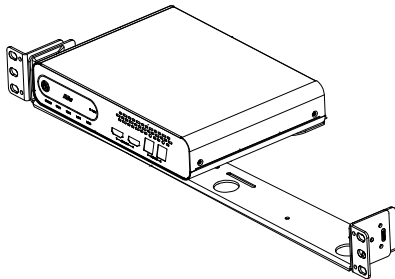


Connections

Front Panel

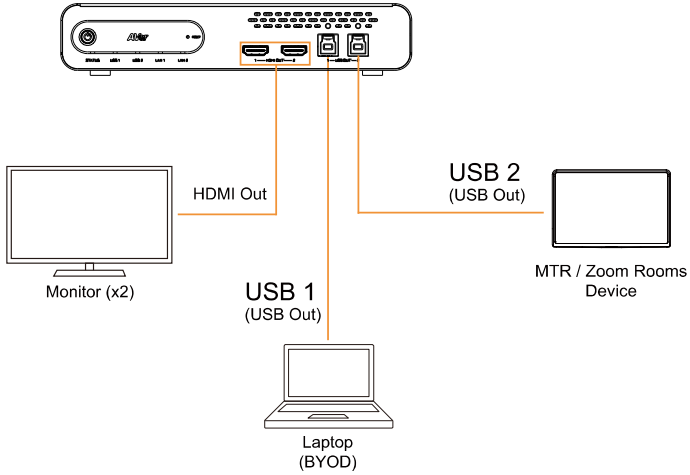

Rear Panel

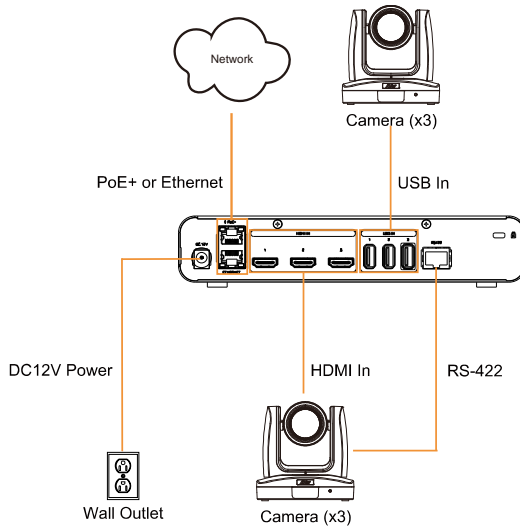

[Note]

Camera Connection: You can connect cameras to the tracking box using **HDMI, USB**, or via **Ethernet (LAN)**. The maximum numbers of simultaneous camera connections are as shown below.

Connection Method	Maximum Number of cameras
HDMI In	3
USB In and Ethernet (LAN)	4

Web Setup

■ Access the Tracing Box via AVer IPCam Utility


1. Download the IPCam Utility from <https://www.aver.com/download-center> and run the IPCam Utility.
2. Click **Search**, and all available devices will be listed on the screen.
3. Select the tracking box from the list, the device info will be displayed in the Settings field.

[Note]

The default network of the tracking box is Static IP (as shown below), and the default ID/Password are **admin/admin**.

Network Port	Default IP Address
PoE+ Port (Recommend)	192.168.1.168
Ethernet Port	192.168.168.168

If you want to configure the network to DHCP, input the ID/Password in the **Login** field, select the “device model” on the list, select “DHCP” and then click the **Apply** button.

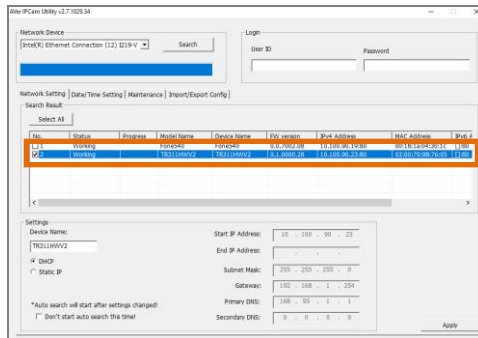

The main web screen is displayed as below.



■ **Or if you want to configure by yourself**

1. Connect the tracking box to the network using the PoE+ port.
2. Set up your computer with static IP 192.168.1.x.
3. Type in 192.168.1.168 in your web browser to access the tracking box.

[Note]

The default network of the tracking box is Static IP, and the default ID/Password are **admin/admin**.


If you want to use the Ethernet port of the tracking box, please refer to the information below to set your computer IP.

Network Port	Default IP Address	Computer IP setting
PoE+ Port (Recommend)	192.168.1.168	192.168.1.x
Ethernet Port	192.168.168.168	192.168.168.x

The main web screen is displayed as below.



Appendix


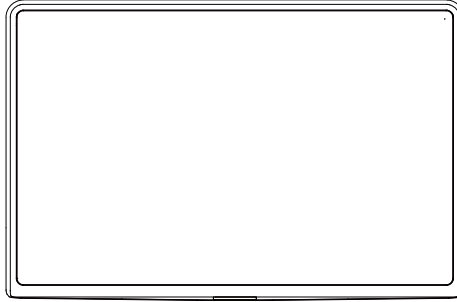



CP10-MT Collaboration Controller

Quick Start Guide


Quick Guide

Package Contents

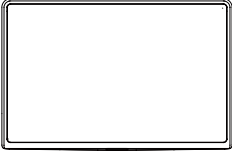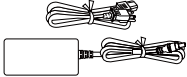CP10-MT	Power Adapter & Power Cord*	Ethernet Cable Holder
		

* The power cord will vary depending on the standard power outlet of the country where it is sold.

Overview

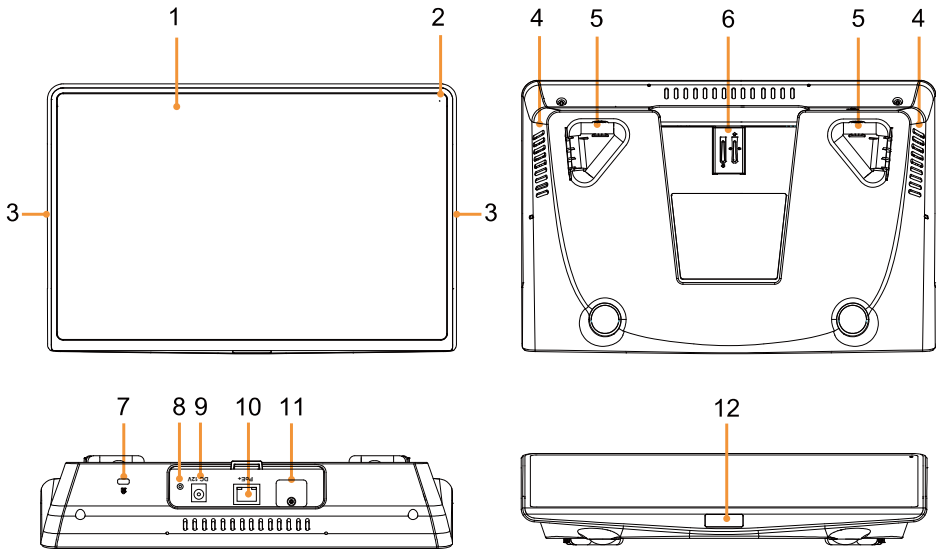

- | | |
|---------------------------------------|-----------------------------|
| 1. 10.1-inch Touch Screen | 7. Kensington Lock |
| 2. Microphone | 8. Reset Button |
| 3. Status LEDs | 9. Power Jack |
| 4. Speaker | 10. PoE+ Port** |
| 5. Rubber Feet | 11. USB 2.0 Type A Port *** |
| 6. Bracket for Ethernet Cable Holder* | 12. PIR Sensor |

* Please refer to Ethernet Cable Holder Installation for more details.

** Please use CAT 5e FTP cable (not included). Power over Ethernet plus (PoE+) is compatible with IEEE 802.3at.

*** For diagnostics and Wi-Fi Dongle connection.


LED Indicator

LED	Status
Green (Solid)	Powered On


Power Connection

There are three ways to power the CP10-MT.


- **Using the supplied power adapter and power cord:** Connect the CP10-MT to the wall outlet using the supplied power adapter and power cord.

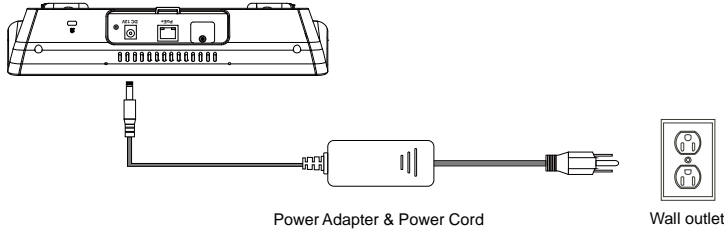

- **With a PoE+ switch:** Connect the CP10-MT to a PoE+ switch using a LAN cable. Please use the PoE+ switch to ensure stable power supply.

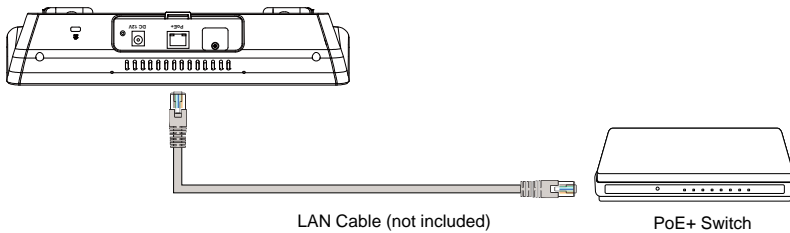


With a PoE+ injector*: Plug the power cord of the PoE+ injector into the wall. Connect the PoE+ injector to the CP10-MT and to the network using LAN cables.

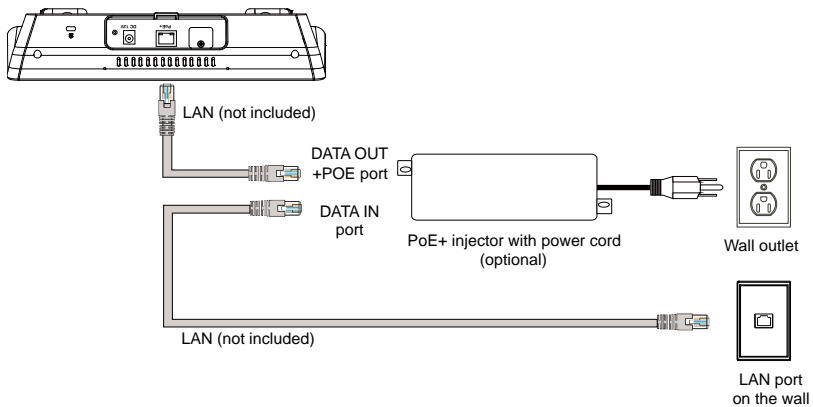


* Please purchase PoE+ injector from AVer.

Ethernet Cable Holder Installation

The Ethernet Cable Holder can be used to protect the Ethernet cable from loosening from the PoE+ port. To install the Ethernet Cable Holder to the Bracket on the rear side of CP10-MT, press the holder inward and then push down the holder into the Bracket.

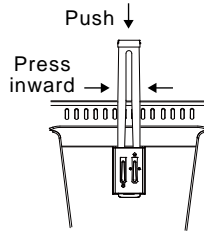

After installing the Ethernet Cable Holder to the Bracket on CP10-MT, you can start connecting the Ethernet cable to the PoE+ port. To do this, 1) Press the holder then pull up the holder. 2) Plug the Ethernet cable to the PoE+ port. 3) Press the holder and push down the holder.

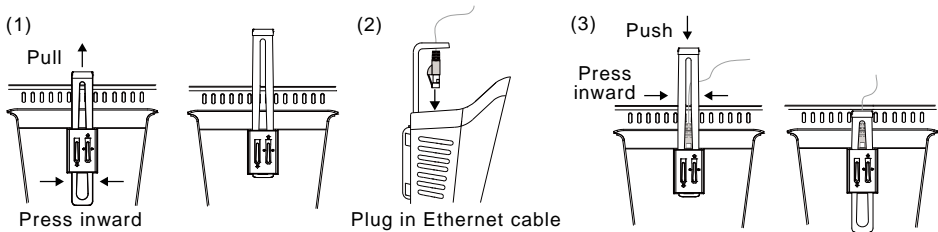

FEDERAL COMMUNICATIONS COMMISSION

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radiofrequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

この装置は、クラス A 機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

사 용 자 안 내 문
이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전자파간섭의 우려가 있습니다.
※ 사용자 안내문은 "업무용 방송통신기자재"에만 적용됩니다.

기종별	사용자안내문
A 급 기기 (업무용 방송통신기자재)	이 기기는 업무용(A 급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

限用物質含有情況標示資訊參考下列網址：<https://tw.aver.com/page/RoHS>

Caution:

Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions.

COPYRIGHT

©2022 AVer Information Inc. All rights reserved. | December 19, 2022

The information contained in this documentation is subject to change without notice.

MORE HELP

For FAQs, technical support, software and user manual download, please visit:

Headquarters: <https://www.aver.com/download-center/>

USA Branch Office: <https://www.averusa.com/pro-av/support>

Europe Branch Office: <https://www.avereurope.com/download-center/>

Technical Support:

Headquarters: <https://www.aver.com/technical-support>

USA Branch Office: <https://averusa.force.com/support/s/contactsupport>

Europe Branch Office: <https://www.avereurope.com/technical-support/>

Contact Information

Headquarters

AVer Information Inc.

<https://www.aver.com>

8F, No.157, Da-An Rd., Tucheng Dist., New Taipei City 23673, Taiwan

Tel: +886 (2) 2269 8535

Europe Branch Office

AVer Information Europe B.V.

<https://www.avereurope.com>

Westblaak 134, 3012 KM, Rotterdam, The Netherlands

Tel: +31 (0) 10 7600 550

Technical support: eu.rma@aver.com

Japan Branch Office

アバー・インフォメーション株式会社

<https://jp.aver.com>

〒160-0023 日本東京都新宿区西新宿 3-2-26 立花新宿ビル 7 階

Tel: +81 (0) 3 5989 0290

テクニカル・サポート: Support.EDU.JP@aver.com

Vietnam Branch Office

Công ty TNHH AVer Information (Việt Nam)

Tầng 5, 596 Nguyễn Đình Chiểu, P.3, Quận 3, Thành phố Hồ Chí Minh 700000, Việt Nam

Tel: +84 (0) 28 22 539 211