

Release note

Product: PTC310/PTC310H/PTC310U/PTC330/PTC330U

PTC310N/PTC310HN/PTC310UN/PTC330N

FW version	V.48
Release date	2023/03/01
New features	1. none
Improvements	1. Bug fix: CL01 controller can't stop the zoom-in function when enabling digital zoom.
	2. Bug fix: CL01 controller can't control the camera when enabling digital zoom and zoom
	out.
	3. Optimize HTTPS configuration.
Known Issues	1. Web page compatibility issue with the Apple MAC Safari browser. Please use the Chrome
	browser on Apple devices in the meantime.
	2. USB port does not support Hot plugging.
	3. When the video mode is set to IP streaming only or NDI only; then when the USB port is
	connected to a PC, users will still see the device name on the PC side but there's no USB
	video (UVC) output.






FW version	V.4	7	
Release date	202	221110	
New features	2.	none	
Improvements	4. Bug fix: TR311HN NDI functionality will be blocked when upgrading to V45 firmware		
	5.	Correction Japanese language	e of OSD menu.
		カメラ	カメラ選択 1 English
		詳細設定	ステータスOSD オン 繁中
		ビデオ出力	言語 冒 饻≣y 日本語
		ネットワーク	A REAL PROPERTY AND A REAL
		システム	77×9.ID AVer_ND Camera
			タリー 有効にする
		a hard the state of the state of the	インフォメーション >
			初期化 オフ
Known Issues	4.		e with the Apple MAC Safari browser. Please use the Chrome
		browser on Apple devices in	the meantime.
	5.	USB port does not yet support	rt Hot plugging.
	6.	When the video mode is set to	o IP streaming only or NDI only; then when the USB port is
		connected to a PC, users will	still see the device name on the PC side but there's no USB
		video (UVC) output.	



FW	V0.0.0000.45				
version					
Release	2022/8/03				
date					
New	1. Add ability to activate ND	I License key code on web	opage.		
feature	AVer • Live View	NDI Activate Function			
	Camera Settings	Local Device Name	Device Channel (Camera ID)		
	Video & Audio		AVer_NDI_Camera		
	몲 Network	Receive Group			
	• Tracking Settings	Public			
	NDI VDI	Reliable UDP			
	-vv- System	Discovery Server	Discovery Server Address		
	Tracking On Off		192.168.1.10		
	Mode O Presenter	Multicast Server	Multicast Server Mask		
	ZoneHybrid		255.255.255.0		
	🔅 Click Track	Multicast Server Address	Multicast TTL		
		239.255.0.0	10	Confirm	с
	P.S.Please visit NewTek we https://www.newtek.com/n		key before activate the NDI.		





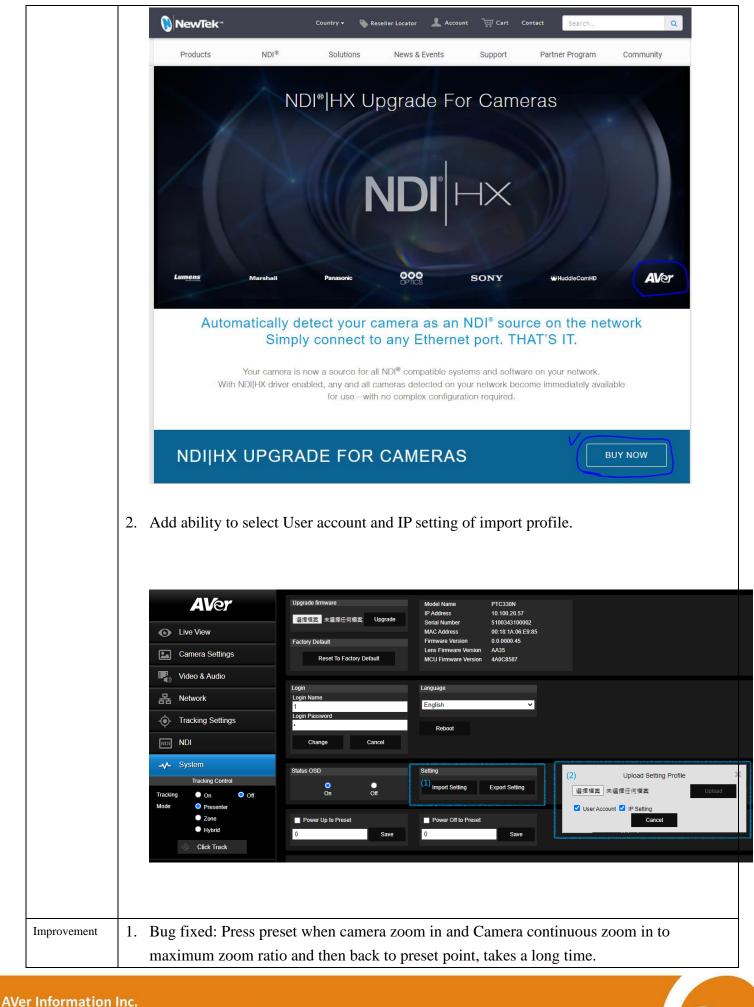

F., No.157, Da-An Rd., Tucheng Dist,. New Taipei City 23673, Taiwan | Tel: +886-2-2269-8535 | Fax: +886-2-2269-8537 | www.aver.com



Product: PTC310/PTC310H/PTC310U/PTC330/PTC330U

PTC310N/PTC310HN/PTC310UN/PTC330N

FW	V0.0.0000.43
version	
Release	2022/5/19
date	
New	3. Add ability to turn off" USB Audio", there's some device only allow to support video and
feature	need to close the USB audio to improvement compatibility issue, e.g. Barco Clickshare
	CX-50. Webpage: Video & Audio > USB Audio Op/Off
	Webpage: Video & Audio > USB Audio On/Off USB Audio
	OSB Addio Off On
	4. Add ability to support LLDP protocol.
	 5. Add ability of AF Mode switch: Continuous AF/ AF Trigger after PTZ Setting "AF Trigger after PTZ" will reduce the focusing process picture when presenter is walking around the podium Webpage: Live View > Camera Control > AF Mode
	Camera Control Preset Pan Speed 9 Titt Speed 9 Low Low
	AF Trigger after PTZ Continuous AF AF Trigger after PTZ ✓



	6. Add VISCA	/CGI commands for	USB /UVC status inquire.		
	VISA Inquiry	Command	Reply Command Packet	Comments	
	Command	Packet			
	USB Status	8x 09 36 69 05 FF	y0 50 00 FF	USB cable plug out	
			y0 50 01 FF	USB cable plug in	
	UVC Status	8x 09 36 69 06 FF	y0 50 00 FF	UVC stream off	
			y0 50 01 FF	UVC stream on	
					1
	CGI	URL	Command	Parameter Name	
	item name				
	USB status	GET(Basic Authentication)	/cgi-bin?Get=usb_status_inquire,3		
		- Reply	"usb_status_inquire,3=X\r\n"	X: 0(plug out), 1(plug in)	
	UVC status	GET(Basic Authentication)	/cgi-bin?Get=uvc_status_inquire,3		
		- Reply	"uvc_status_inquire,3=X\r\n"	X: 0(stream off), 1(stream on)	
Improvement	6. Bug fixed: F	CTMP audio issue wh	en streaming to Vimeo		
	e	One push AWB of pre	e e		
	-		tion is clicked, there will be		
Known			ty issue with the Apple MA	C Safari browser. Please	e use
Issues			vices for the meantime.		
	1	es not yet support H	1 00 0		
			set to IP streaming only or	•	
	-		still see the device name or	the PC, but will not have	any
	USB streaming	output.			





Product: PTC310/PTC310H/PTC310U/PTC330/PTC330U


PTC310N/PTC310HN/PTC310UN/PTC330N

FW	V0.0.0000.42			
version				
Release	2022/4/06			
date				
New	3. "Preset Accuracy"	function is to i	mprove for special n	novement in hybrid Tracking mode.
feature	movement will aff area. We suggest disable	ect a little bit o	f hybrid Tracking mo euracy" when use Hy Save	n of backlash issues, but the ode when presenter go into preset brid Tracking mode.
	 Add ability to mov Tracking mode. 	ve the preset wh	nen presenter touch t	he boundary of preset in Zone
	•	-	-	
	Tracking mode.	-	-	
	Tracking mode. 5. Add customized V Command Set	'ISCA comman	ds for Auto Zoom/ A	auto Tilt.
	Tracking mode. 5. Add customized V	ISCA comman	ds for Auto Zoom/ A	auto Tilt.
	Tracking mode. 5. Add customized V Command Set Auto zoom	/ISCA comman Command On	ds for Auto Zoom/ A Command Packet 8x 01 04 A0 02 FF	auto Tilt.
	Tracking mode. 5. Add customized V Command Set	/ISCA comman Command On Off	ds for Auto Zoom/ A Command Packet 8x 01 04 A0 02 FF 8x 01 04 A0 03 FF	auto Tilt.
	Tracking mode. 5. Add customized V Command Set Auto zoom	ISCA command Command On Off On	ds for Auto Zoom/ A Command Packet 8x 01 04 A0 02 FF 8x 01 04 A0 03 FF 8x 01 04 A7 02 FF	auto Tilt.
Improvement	Tracking mode. 5. Add customized V Command Set Auto zoom Auto Tilt Auto Zoom/Tilt preset 9. Bug fixed: Userna 10. Bug fixed: Bootup	ISCA command On Off Off Off Set me and passwo	ds for Auto Zoom/ A Command Packet 8x 01 04 A0 02 FF 8x 01 04 A0 03 FF 8x 01 04 A7 02 FF 8x 01 04 A7 03 FF 8x 01 04 A8 pp FF rd text on web pages ve when camera sett	Auto Tilt. Comments pp: 0x00 To 0xFF normal preset s only allow 0-9, a-z, A-Z.
Improvement	Tracking mode. 5. Add customized V Command Set Auto zoom Auto Tilt Auto Zoom/Tilt preset 9. Bug fixed: Userna 10. Bug fixed: Bootup 11. Bug fixed: Disable	ISCA command Command On Off On Off Set me and passwo process impro e Auto Tracking	ds for Auto Zoom/ A Command Packet 8x 01 04 A0 02 FF 8x 01 04 A0 03 FF 8x 01 04 A7 02 FF 8x 01 04 A7 02 FF 8x 01 04 A7 03 FF 8x 01 04 A8 pp FF ord text on web pages ye when camera sett g at bootup if power of	Auto Tilt. Comments pp: 0x00 To 0xFF normal preset s only allow 0-9, a-z, A-Z. ing on mirror or flip.
_	Tracking mode. 5. Add customized V Command Set Auto zoom Auto Tilt Auto Zoom/Tilt preset 9. Bug fixed: Userna 10. Bug fixed: Bootup 11. Bug fixed: Disable 9. Web GUI has know	TISCA command On Off Off Off Set me and passwo process impro e Auto Tracking wn compatibilit	ds for Auto Zoom/ A Command Packet 8x 01 04 A0 02 FF 8x 01 04 A0 03 FF 8x 01 04 A7 02 FF 8x 01 04 A7 02 FF 8x 01 04 A7 03 FF 8x 01 04 A8 pp FF ord text on web pages ye when camera sett g at bootup if power of	Auto Tilt. Comments pp: 0x00 To 0xFF normal preset s only allow 0-9, a-z, A-Z. ing on mirror or flip. on & off to preset is active. ele MAC Safari browser. Please use
Known	Tracking mode. 5. Add customized V Command Set Auto zoom Auto Tilt Auto Zoom/Tilt preset 9. Bug fixed: Userna 10. Bug fixed: Bootup 11. Bug fixed: Disable 9. Web GUI has know	AISCA command On Off On Off Set me and passwo process impro e Auto Tracking wn compatibility er on Apple de	ds for Auto Zoom/ A Command Packet 8x 01 04 A0 02 FF 8x 01 04 A0 03 FF 8x 01 04 A7 02 FF 8x 01 04 A7 03 FF 8x 01 04 A7 03 FF 8x 01 04 A8 pp FF ord text on web pages ve when camera sett g at bootup if power of ty issue with the App vices for the meantin	Auto Tilt. Comments pp: 0x00 To 0xFF normal preset s only allow 0-9, a-z, A-Z. ing on mirror or flip. on & off to preset is active. ele MAC Safari browser. Please use
Known	Tracking mode. 5. Add customized V Command Set Auto zoom Auto Tilt Auto Zoom/Tilt preset 9. Bug fixed: Userna 10. Bug fixed: Bootup 11. Bug fixed: Disable 9. Web GUI has know the Chrome brows 10. USB port does not	Command On Off On Off Set me and passwo process impro e Auto Tracking wn compatibilitier on Apple de yet support Ho	ds for Auto Zoom/ A Command Packet 8x 01 04 A0 02 FF 8x 01 04 A0 03 FF 8x 01 04 A7 02 FF 8x 01 04 A7 02 FF 8x 01 04 A7 03 FF 8x 01 04 A8 pp FF ord text on web pages ve when camera sett g at bootup if power of ty issue with the App vices for the meanting of plugging.	Auto Tilt. Comments pp: 0x00 To 0xFF normal preset s only allow 0-9, a-z, A-Z. ing on mirror or flip. on & off to preset is active. ele MAC Safari browser. Please use
Known	Tracking mode. 5. Add customized V Command Set Auto zoom Auto Tilt Auto Zoom/Tilt preset 9. Bug fixed: Userna 10. Bug fixed: Bootup 11. Bug fixed: Disable 9. Web GUI has know the Chrome brows 10. USB port does not When the video mode	TSCA command On Off Off Off Set me and passwo process impro e Auto Tracking wn compatibilit er on Apple det t yet support Ho via the web is	ds for Auto Zoom/ A Command Packet 8x 01 04 A0 02 FF 8x 01 04 A0 03 FF 8x 01 04 A7 02 FF 8x 01 04 A7 02 FF 8x 01 04 A7 03 FF 8x 01 04 A8 pp FF ord text on web pages we when camera sett g at bootup if power of ty issue with the App vices for the meanting of plugging. set to IP streaming of	auto Tilt. Comments pp: 0x00 To 0xFF normal preset s only allow 0-9, a-z, A-Z. ing on mirror or flip. on & off to preset is active. le MAC Safari browser. Please use ne.






Product: PTC310/PTC310H/PTC310U/PTC330/PTC330U PTC310N/PTC310HN/PTC310UN/PTC330N

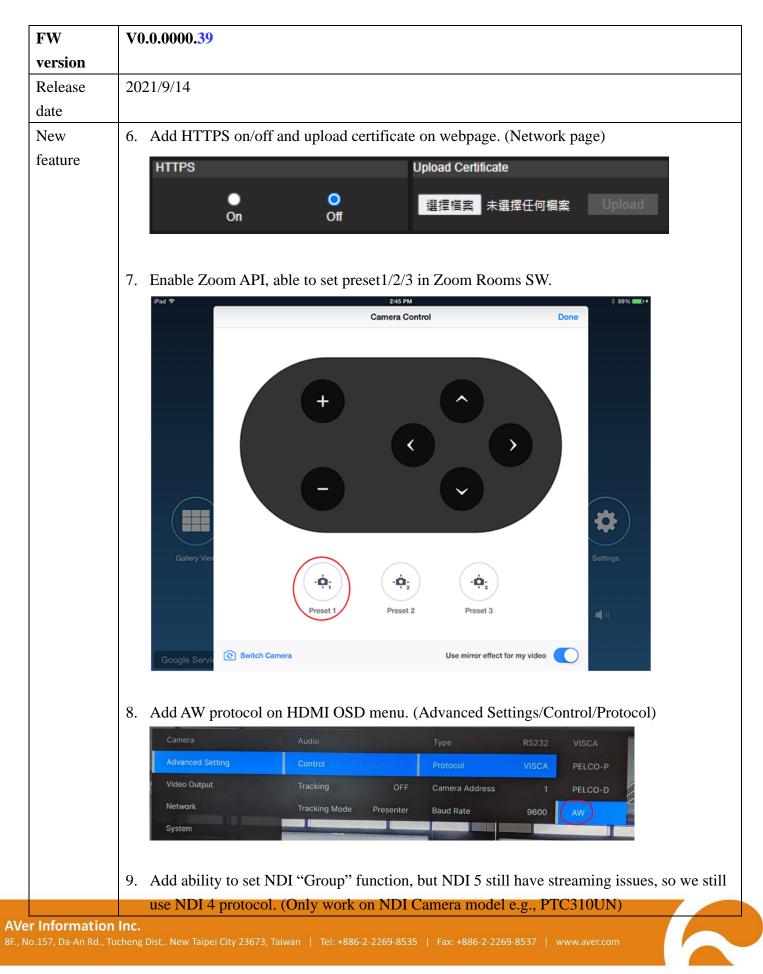



	NDI
	Camera ID AVer_NDI_Camera
	Group Public
	Set
	10. Add ability to save preset for people size when turn OFF Auto Zoom.
	Auto Zoom When Auto Zoom is off, camera stops zooming in/out automatically and shoots the presenter according to the shot size of the preset you choose. Preset 0 Preset 1
	Preset 2 Preset 3
Improvement	12. Bug fixed: when turn off Sleep to preset and click "Timer" and then enable Sleep to preset.
	13. Bug fixed: camera FOV different after call preset1.
	14. Bug fixed: when power on at zone tracking mode, camera will not return to tracking point.
	15. Improve Windows Camera APP compatibility.
	16. Live image color improvement. (Lower down saturation a little bit)
Known	11. Web GUI has known compatibility issue with the Apple MAC Safari browser. Please use
Issues	the Chrome browser on Apple devices for the meantime.
	12. USB port does not yet support Hot plugging.
	When the video mode via the web is set to IP streaming only or NDI only; then when the USB
	port is connected to a PC, users will still see the device name on the PC but will not have any
	USB streaming output.



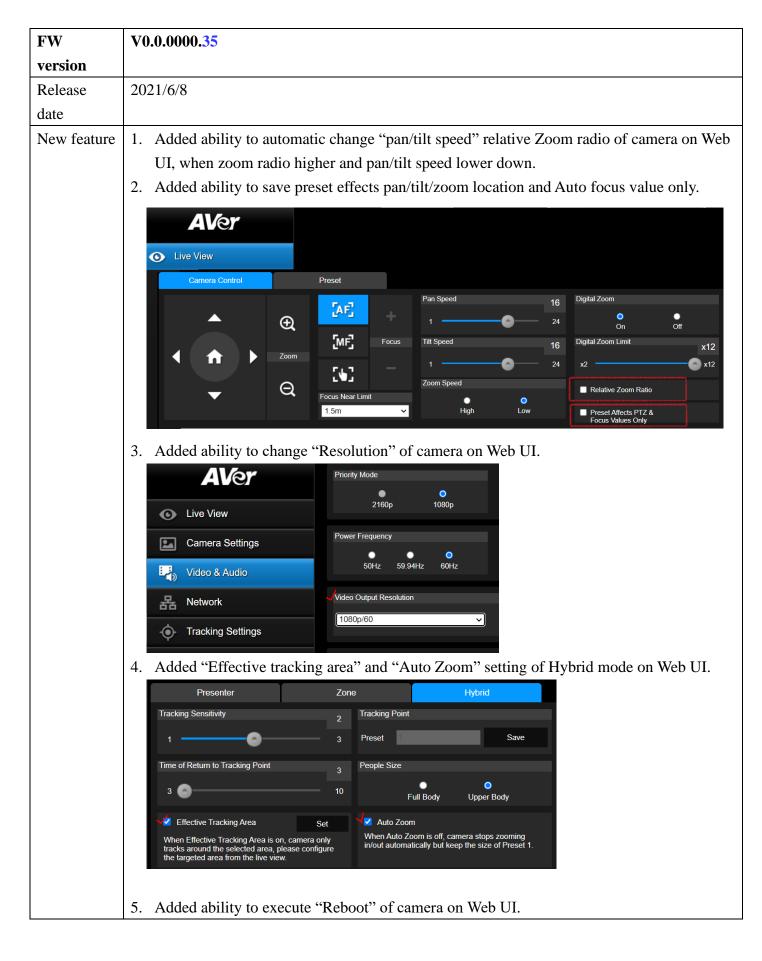



IP Address 61.219.195.21 Serial Number 5310895400033 MAC Address 00:18:1A:0A:E7:01 Firmware Version 0.0.0000.35 Lens Firmware Version AA35 MCU Firmware Version 4A0C8587	Model Name	TR311HN		
MAC Address 00:18:1A:0A:E7:01 Firmware Version 0.0.0000.35 Lens Firmware Version AA35 MCU Firmware Version 4A0C8587	IP Address	61.219.195.21		
Firmware Version 0.0.0000.35 Lens Firmware Version AA35 MCU Firmware Version 4A0C8587	Serial Number	5310895400033		
Lens Firmware Version AA35 MCU Firmware Version 4A0C8587	MAC Address	00:18:1A:0A:E7:01		
MCU Firmware Version 4A0C8587	Firmware Version	0.0.0000.35		
Language	Lens Firmware Version	AA35		
Language Reboot	MCU Firmware Version	4A0C8587		
Language Reboot				
Language Reboot				
	Language		Rebo	ot

6. Added ability to import or export of camera config file on Web UI.

Setting	
Import Setting	Export Setting

7. Added ability to execute some function via VISCA preset number on Web UI, allows user to execute some function from controller.

Set VISCA Customized Fu	nctions
Function Name	Preset Numbe
Auto Tracking On	168
Auto Tracking Off	169
Enable Presenter mode	164
Enable Zone mode	165
Enable Hybrid mode	166
Recall Tracking Point	162
Switch Presenter	163
Switch Tracking Mode	167
Full Body	160
Upper Body	161
Tally On	96
Tally Off	97
OSD menu On/Off	95
Reboot	200
	Function Name Auto Tracking On Auto Tracking Off Enable Presenter mode Enable Zone mode Enable Hybrid mode Recall Tracking Point Switch Presenter Switch Presenter Full Body Upper Body Tally On Sub menu On/Off

8. Added ability to use hot key to trun RTMP ON and OFF from remote control "EV+" and



	"EV-". e.g. long press "EV+" button on remote control over1.5 sec and turn on RTMP.
	MEM CAMERA NELLET MEM CAMERA NELLET MEM CAMERA NELLET CAMERA NELLET Mem Mem Mem Mem
	9. <u>Sleep mode</u> : added ability to use UVC video OFF and camera go to a preset and this
	function only effective in "USB only" Video mode.
	10. Sync. with tracking : added ability to use UVC video ON/ OFF to turn ON/OFF Auto
	Tracking and this function only effective in sleep mode.
	e.g. When teacher turn off ZOOM, teams or Googlemeet and Camera will automatic turn
	off Auto Tracking, reduce hand contract on remote control.
	11. <u>Sleep Timer</u> : added ability to set a timer go to a preset after turn off UVC video.
	Sleep to Preset Sync. with tracking 20 Save Sleep mode can be enabled when video mode is USB only. Sleep Timer Image: Sleep Timer
Improvement	17. Support NDI4.6.2 version of TR311HN.(NDI model only)
	18. OBS Plug-in update.
	19. The cache will be automatically reloaded when the different firmware version is detected.
	20. Bug fix of "power off to preset", make camera go to correct preset.
Know issue	1. When import new config file into camera and enable Sleep mode will be abnormal, need
	to reboot to resume normal function.
	2. Web GUI has known compatibility issue with the Apple MAC Safari browser. Please
	use the Chrome browser on Apple devices for the meantime.
1	3. USB port does not support Hot plugging yet.



Release note

Product : Product : PTC310/PTC310H/PTC310U/PTC330U

PTC310N/PTC310HN/PTC310UN


AV

FW	V0.0.0000.30
version	
Release	2021/4/6
date	
New	11. Added Power Up to Preset position setting on Web UI.
feature	12. Added Power Off to Preset position setting on Web UI.
	Power Up to Preset Very Power Off to Preset
	0 Save 0 Save
	13. Added Tracking mode SET & GET mode commands to the CGI/VISCA command list.
	14. Added ability to change "Hostname" of camera on Web UI.
	AVer DHCP Hostname
	Live View
	IP Address Netmask
	Camera Settings 10.100.105.126 255.255.255.0
	Video & Audio Gateway DNS
	R Network
	15. Relocated the Tracking Controls to the Main Menu on the Web UI.
	Iver View Carnera Settings Video & Audio Network Tracking Sattings V< System Index of Control Presenter Or Carnera Control Presenter Or Carnera Control Presenter Or Carnera Control Presenter Or Carnera Control Presenter Or Or Cornera Control Presenter Or Or Cornera Control Presenter Or Or Or Or Cornera Control Presenter Or Or Or Or Or Or Or Or Correr Correr Correr Correr Correr Correr Correr
	16.Added Effective Tracking Area function in Presenter Mode. If this is checked, the
er Information	camera can be programmed to only track the subject within a predefined area of its view.
	ucheng Dist., New Taipei City 23673, Taiwan Tel: +886-2-2269-8535 Fax: +886-2-2269-8537 www.aver.com




	AVer								
•	Live View								
•	Camera Settings								
	Video & Audio								
윪	Network								
\diamond	Tracking Setting	5							
-^-	System								
	Tracking Control								
Tracking Mode	On Presenter	Off	Presenter		Zone	9		Hybrid	
	O Zone		Tracking Sensitivity		2	Tracking Poir	nt		
	Hybrid		1		3	Preset			Save
	💮 Click Track		Time of Return to Tracking Point		3	People Size			
			3 💿		10		Full Body	O Upper B	ody
			Effective Tracking Area	Set		🗹 Auto Zo	om		
			When Effective Tracking Area is on tracks around the selected area, pl the targeted area from the live view	lease configure		in/out auton	Zoom is off, ca natically and sl o the shot size	noots the pre	zooming senter

17. Added Auto Zoom Enable/Disable function in Presenter Mode. When checked, the initial zoom value once subject is acquired is preserved throughout the tracking experience.

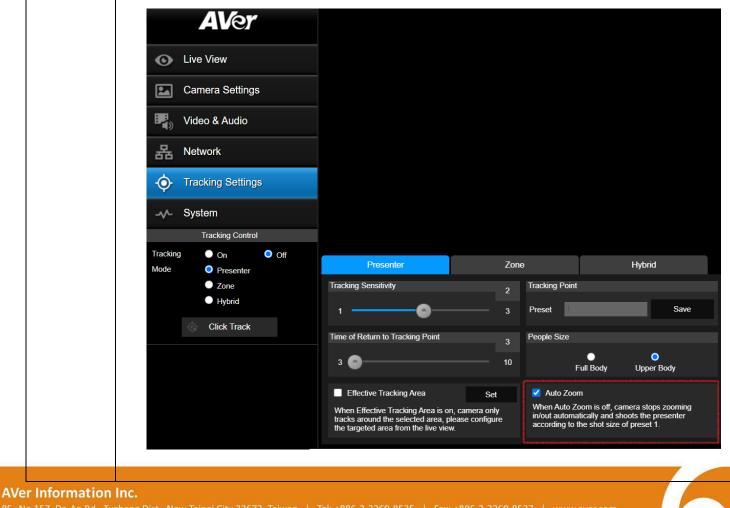



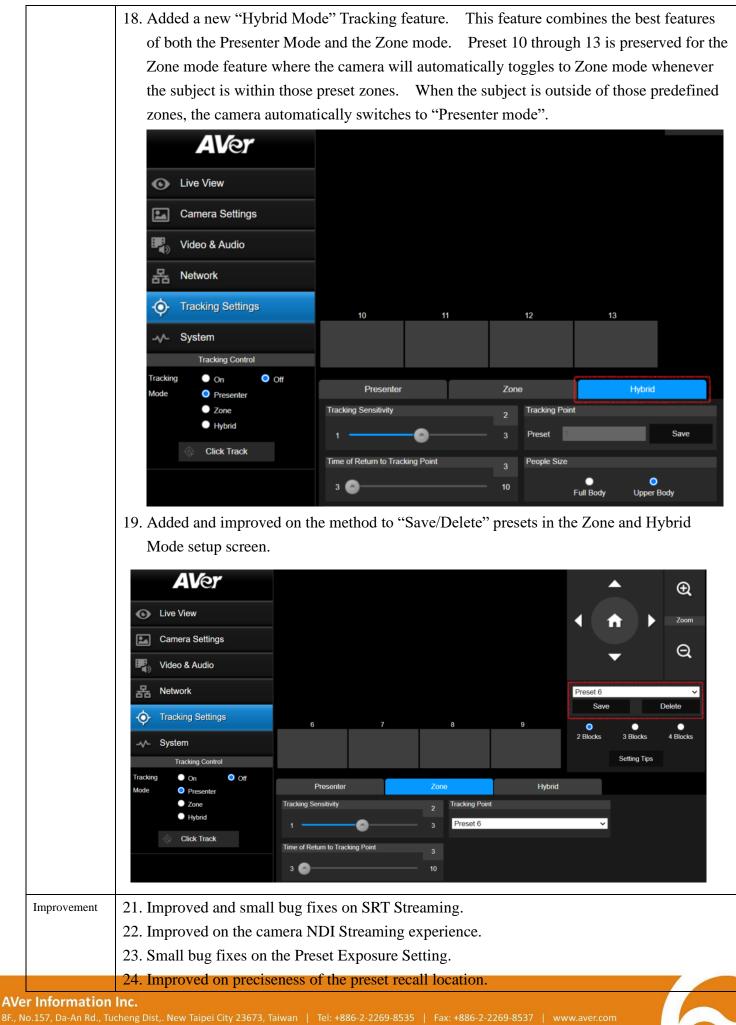



Known	13. Web GUI has known compatibility issue with the Apple MAC Safari browser. Please use			
Issues	the Chrome browser on Apple devices for the meantime.			
	14. USB port does not yet support Hot plugging.			
	When the video mode via the web is set to IP streaming only or NDI only; then when the USB			
	port is connected to a PC, users will still see the device name on the PC, but will not have any			
	USB streaming output.			

