

Setup your AVer Document Camera from home!

Please first identify which AVer document camera you are using to know what software to install.

A+ Suite (Sphere2 on Win10/Mac) or Sphere Lite (Chromebooks): U70+, U70, U50, M70HD, 300AFHD, F70W, F50-8M, F17-8M, M17-13M, F50HD, F17HD
Also Supports: M15W, M70W, M15-13M (Win Only)

AVerTouch (Win10/Mac): M15W, M15-13M, M70W, M11-8M
Also Supports: U50, U70, F17-8M, F50-8M, M17-13M

A+ Interactive Software (Old Version on Win/Mac): V300AF ASIC, SPC300 ASIC, SPC300 +, CP130, CP150, CP300, SPB350, SPB370, CP135, CP155, CP355, V355AF, V310AF, SPB350+, V300AF+, F30, F50, U10, U15, AP20, M50, W30

Sphere (Old Version on Win/Mac): PL50, SPB350, SPB370, SPB350+, M50, M70, V300AF+, F50, F30, F15 U15, W30


Zoom, Skype, Google Hangout (Win/Mac): Refer to the end of the guide to view compatibility list

A+ Suite (Sphere2):

1. Download the A+ Suite software on your computer, go to:

<https://averusa.com/education/support/aplus-suite>

Select the OS you are using to download the software (we will use Win10 in this tutorial)



Supported products:

AVer U70+, AVer U50, AVer M70HD, AVer 300AFHD, AVer F70W, AVer F50-8M, AVer F17-8M, M17-13M

A+ Suite

Download for : [Windows](#) [Mac](#) [iPad](#) [Chromebook](#) [Android](#)

New version:

[A+ Suite V2.7.2170.171](#)  - Windows


[A+ Suite V2.7.2170.171](#)  - Windows Server Deployment (Sphere2 Only MSI)

[ClassSend for Students](#) - Windows (requires Chrome browser for operation)


[Release Note](#) 

[What's New](#) 

2. Open the downloaded .exe file to start the installation



Follow the setup wizard to install the A+ Suite software

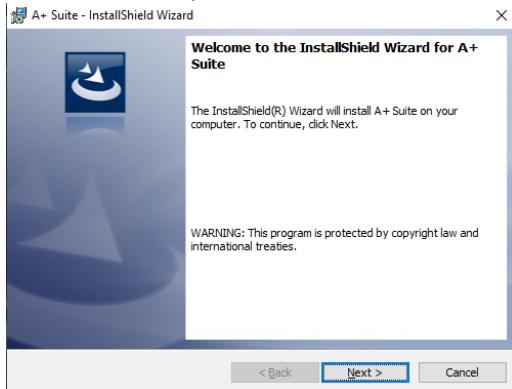


3. After installation is completed, open the Sphere2 software



4. Plug in the power adapter to your document camera and turn it on by pressing the power button (does not apply to U-series doc cams, your document camera may look different than the one pictured)

Connecting the Power


Connect the power adapter (12V) to a standard 100V~240V AC power outlet. Press  button to go into standby mode once the power is connected. Press  again to boot up the machine.

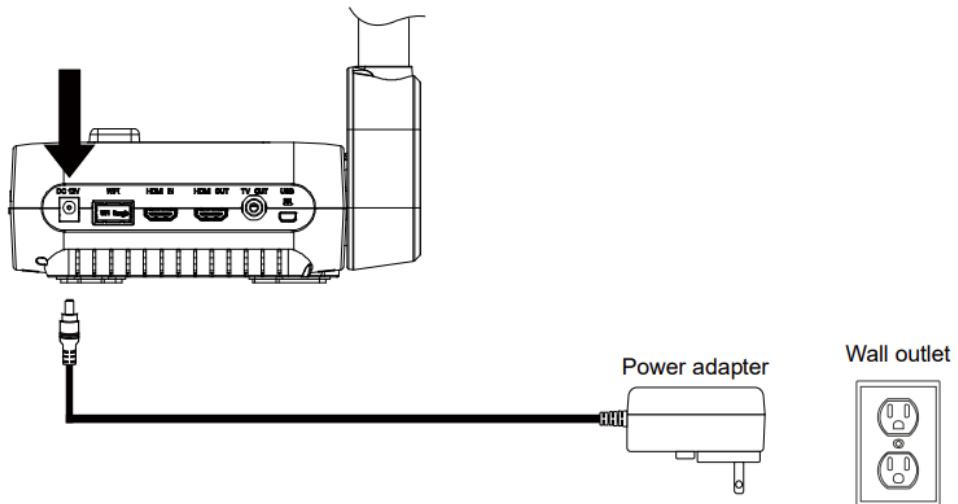


5. Locate a USB port on your computer and connect your camera to it via USB cable that is included

Connect to a Computer via USB


Locate the USB port of the computer or laptop and connect it to the PC port of the AVerVision F70W.

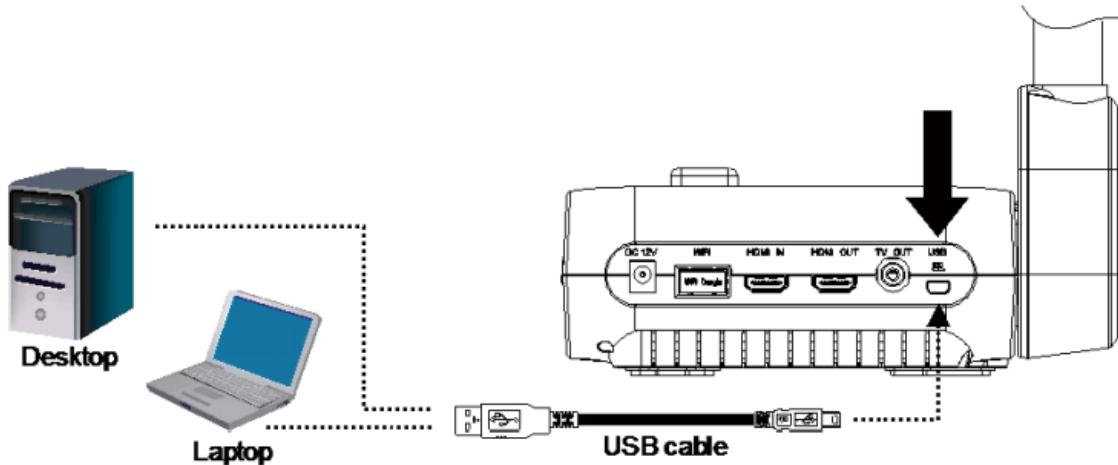

6. Select the visualizer icon on the top right of the Sphere2 software and select your camera

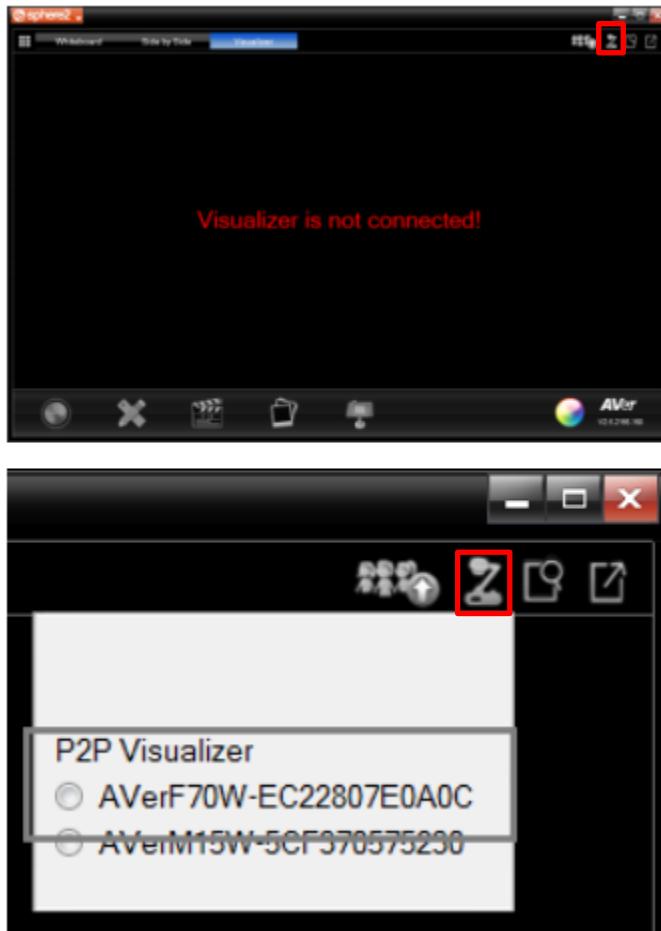

7. You are now connected to your AVer document camera and can begin teaching!

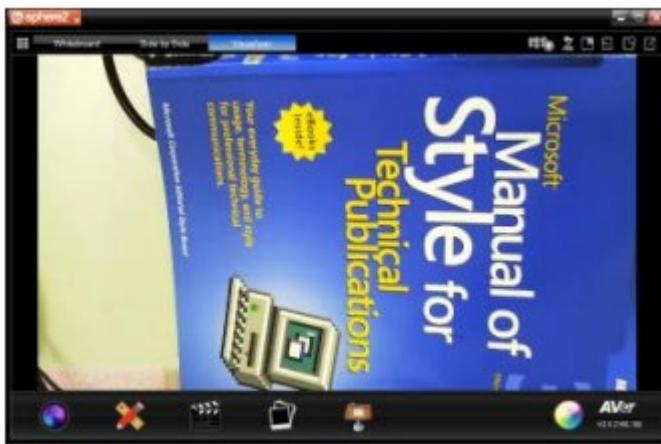

If you own an AVer F70W and wish to connect to your computer wirelessly, please follow this guide:

<https://averusa.com/education/downloads/F70WV2-Quick-Guide-EN-v5-2020-02-24.pdf>


Sphere Lite (Chromebook):

1. Download the Sphere Lite software on your Chromebook, go to:
<https://chrome.google.com/webstore/detail/sphere-lite/bhmibpbadaengbikmoglphhlhioajdn?hl=en>

Home > Apps > Sphere Lite




2. Launch Sphere Lite app after installing

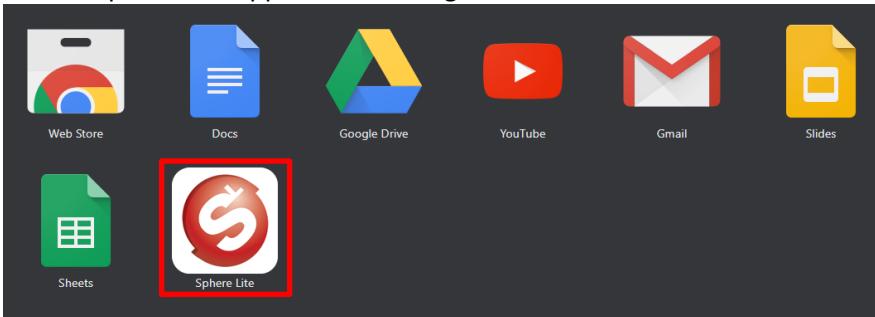

3. Plug in the power adapter to your document camera and turn it on by pressing the power button (does not apply to U-series doc cams, your document camera may look different than the one pictured)

Connecting the Power


Connect the power adapter (12V) to a standard 100V~240V AC power outlet. Press  button to go into standby mode once the power is connected. Press  again to boot up the machine.

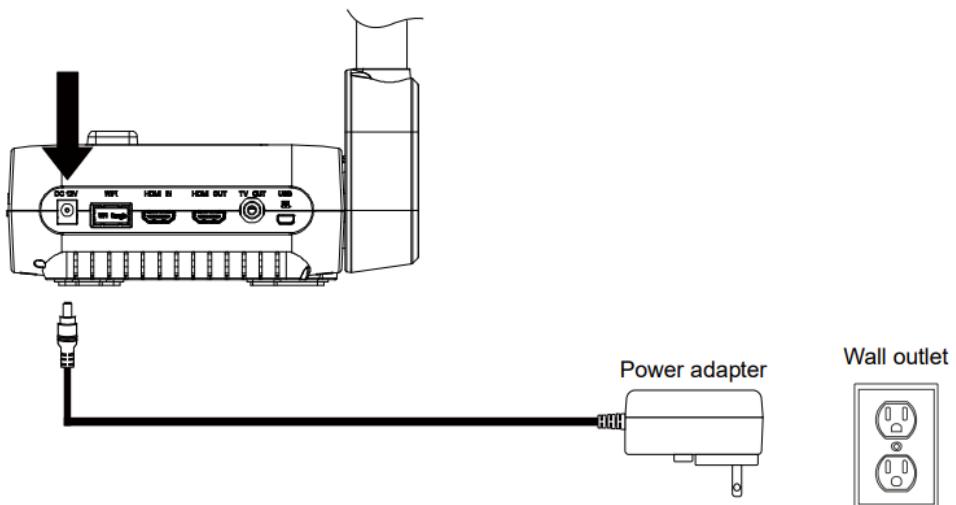


4. Locate a USB port on your Chromebook and connect your camera to it via USB cable that is included

Connect to a Computer via USB

Locate the USB port of the computer or laptop and connect it to the PC port of the AVerVision F70W.

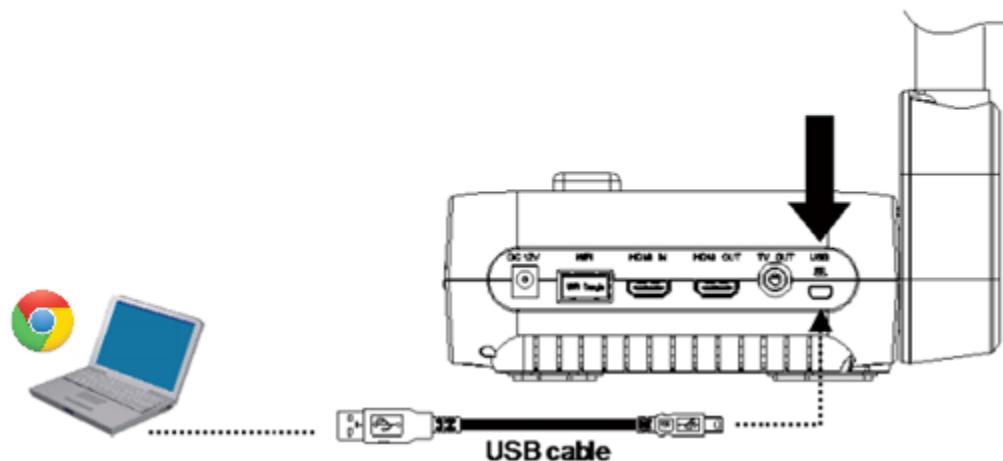

5. Select your camera on the bottom left. You are now connected to your AVer document camera and can begin teaching!

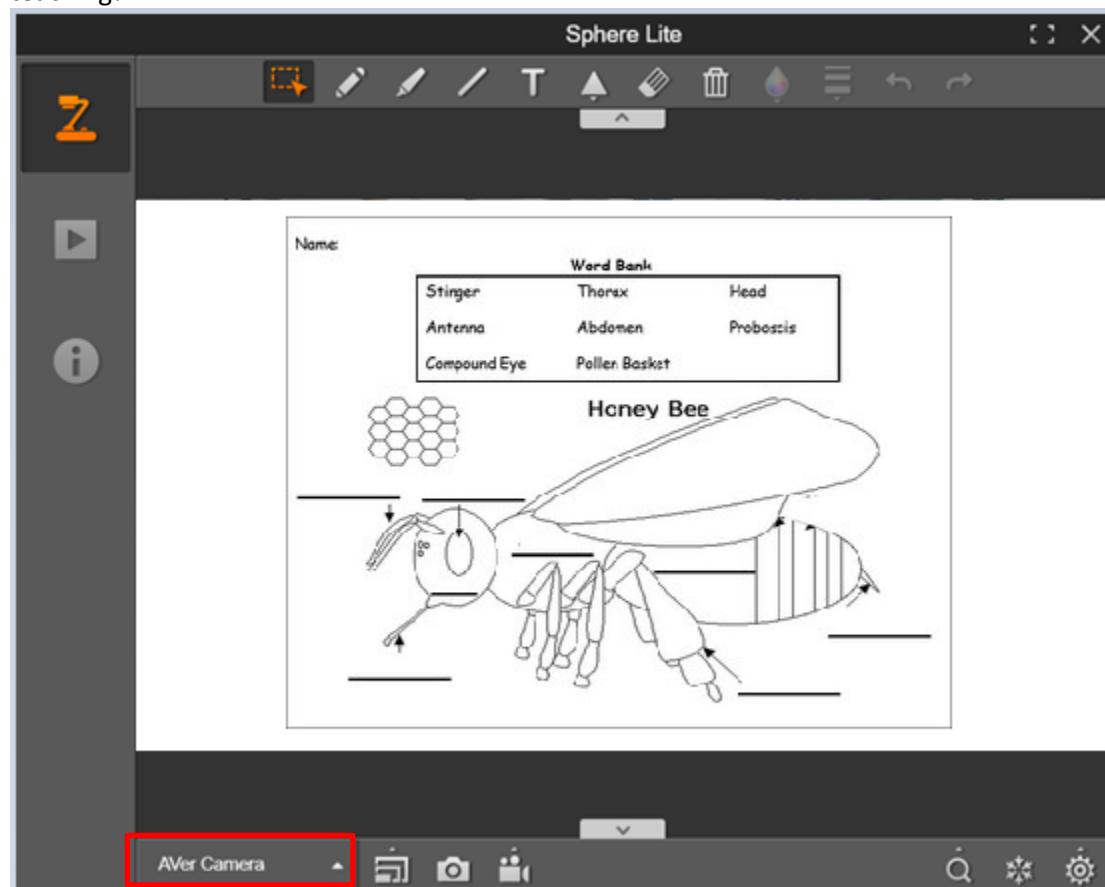

AVerTouch:

1. Download the AVerTouch software on your computer, go to:

<https://averusa.com/education/support/avertouch>

Select the OS you are using to download the software (we will use Win10 in this tutorial)

[Download](#)

Supported products:

AVer M15W, AVer M15-13M, AVer M70W

AVerTouch

Download for : [Windows](#) [Mac](#)

New version:

[AVerTouch Win V1.1.2008.0](#)  - 58.7MB

Win AVerTouch Release Notes  (Updated: 2/27/2020)


[AVerCamSetupTools_v1.1.1007.0](#)  - 17.2MB

[AVer CamSetupTools SOP](#) 


Previous version:

[AVerTouch_v1.1.1005.0](#)  - 58.4MB


2. Unzip the downloaded .zip file



3. Open the extracted folder and run the .exe to start the installation

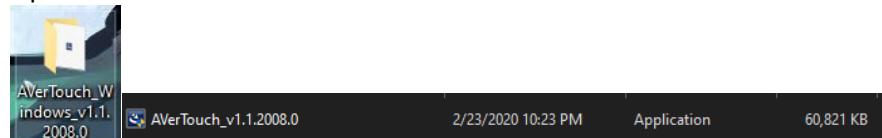


4. Follow the setup wizard to install the AVerTouch software

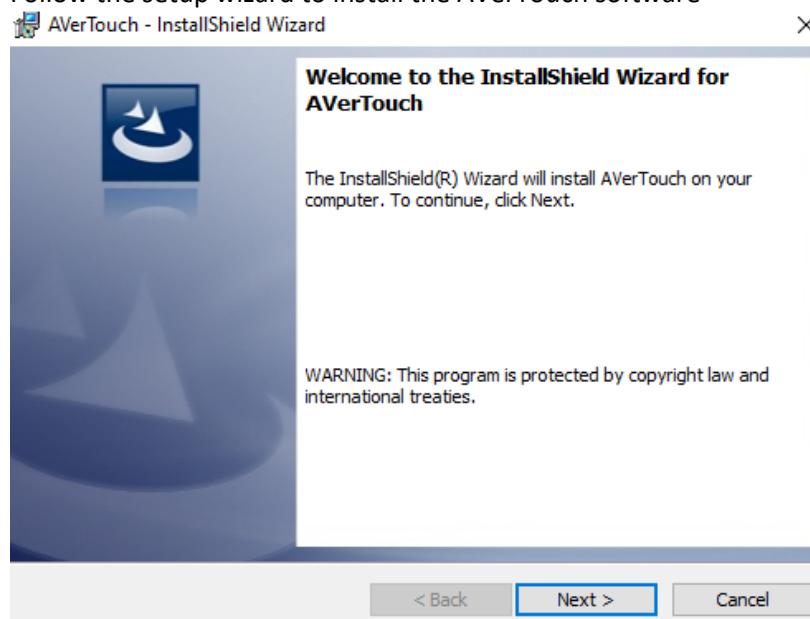


5. After installation is completed, open the AVerTouch software



6. Plug in the power adapter to your document camera and turn it on by pressing the power button (your document camera may look different than the one pictured)

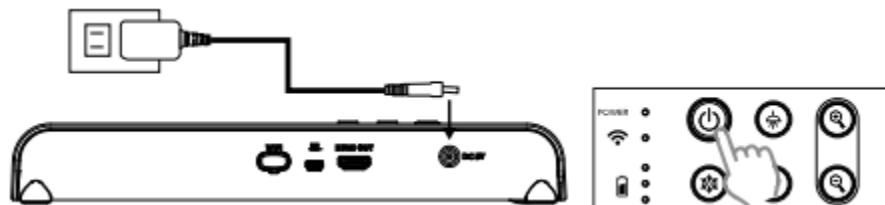


7. Locate a USB port on your computer and connect your camera to it via USB cable that is included

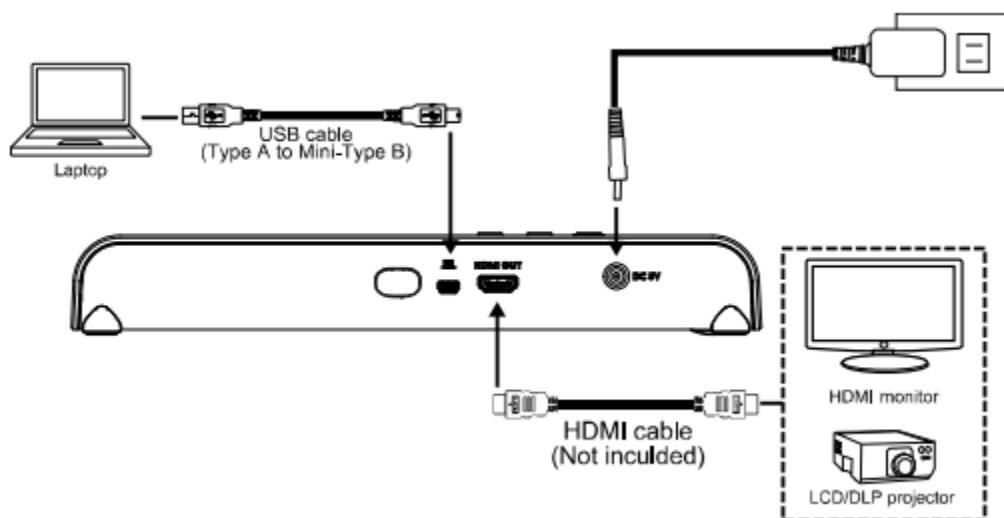

Note: For M15W/M70W users, please make sure WiFi is turned off when trying to do a USB connection

8. The connected visualizer will appear within the AVerTouch software. Click the play icon to connect to the camera

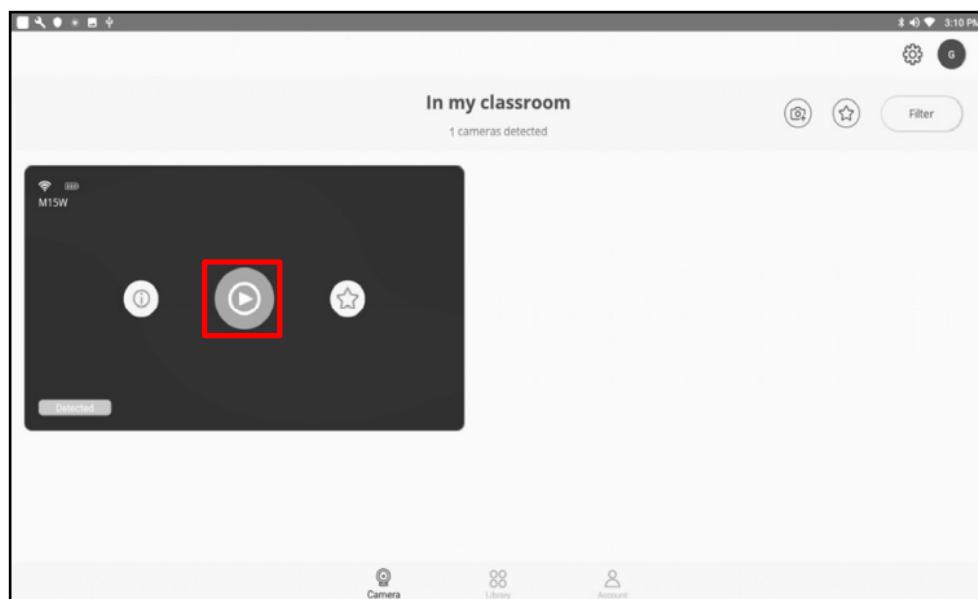

9. You are now connected to your AVer document camera and can begin teaching!

If you own an AVer M15W/M70W and wish to connect to your computer wirelessly, please follow this guide:

M15W: <https://averusa.com/education/downloads/M15W-instruction-manual-EN-2019-12-20.pdf>


M70W: <https://averusa.com/education/downloads/M70W-instruction-manual-EN-v1-2019-12-20.pdf>

A+ Interactive Software:

1. Download the A+ Interactive Software on your computer, go to:

<https://averusa.com/education/support/averplus>

Select the OS you are using to download the software

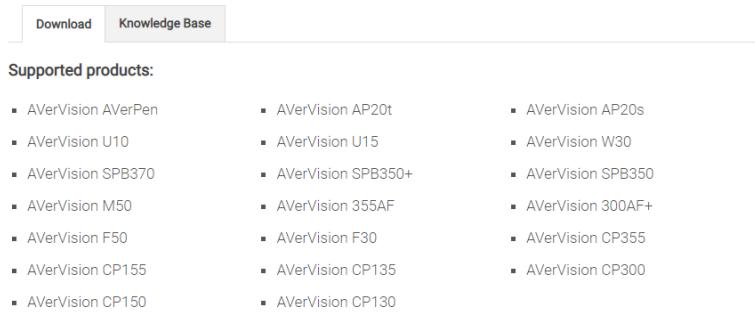

Download Knowledge Base

Supported products:


▪ AVerVision AVerPen	▪ AVerVision AP20t	▪ AVerVision AP20s
▪ AVerVision U10	▪ AVerVision U15	▪ AVerVision W30
▪ AVerVision SPB370	▪ AVerVision SPB350+	▪ AVerVision SPB350
▪ AVerVision M50	▪ AVerVision 355AF	▪ AVerVision 300AF+
▪ AVerVision F50	▪ AVerVision F30	▪ AVerVision CP355
▪ AVerVision CP155	▪ AVerVision CP135	▪ AVerVision CP300
▪ AVerVision CP150	▪ AVerVision CP130	

A+ Interactive Software (Old version)


Download for: [Windows](#) [Mac](#)

[A+ Interactive Software 1.7 Software \(v.1.7.1.13\) !\[\]\(f80254b170d0ecdc443847276e625120_img.jpg\) - Windows](#)
[A+ Interactive Software Quick Reference Guide !\[\]\(f088b1629d3cb765ad7e1a33317c2efd_img.jpg\) - Windows](#)
[A+ Interactive Software 1.7 Release Notes !\[\]\(3f0caf7929933096753ddd9362ac162d_img.jpg\)](#)
[A+ Interactive Software 1.7 MSI \(No Bonjour\) !\[\]\(51dcdb92e2aaf6f9e44bb6dfc26ecefa_img.jpg\)](#)
[What's New in A+ Interactive Software? !\[\]\(9871cf0a3c95e5b4689c992ad0529c32_img.jpg\) \(PDF\)](#)


2. Unzip the downloaded .zip file



3. Open the extracted folder and run the .exe to start the installation




4. Follow the setup wizard to install the A+ Interactive Software

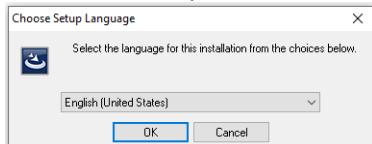

5. After installation is completed, open the A+ Interactive Software

6. Power on and connect your doc cam to your computer via USB cable
 - a. Note: If you are using an older AVer doc cam, be sure the toggle switch is set to the left for PC mode (only applies to certain older models)

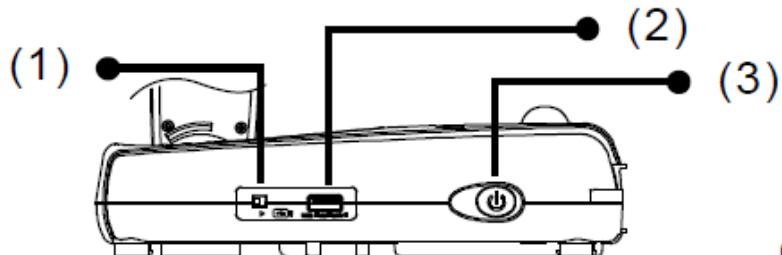

(fig. 1.2)

Name	Function
(1) USB Flash Drive switch	Switch to right (►) for audio video recording directly to a USB flash drive and left (◀) when connecting AVerVision M50 to a computer using a USB cable.
(2) USB Flash Drive port	Insert a USB flash drive for audio video recording.
(3) Power button	Turn the unit on/standby mode.

7. Select your visualizer within the software and you are now connected!

Sphere:

1. Download the Sphere on your computer, go to:

<https://averusa.com/education/support/sphere>

Select the OS you are using to download the software

Download Knowledge Base

Supported products:


▪ AVerVision U15	▪ AVerVision U10	▪ AVerVision PL50
▪ AVerVision SPB370	▪ AVerVision SPB350+	▪ AVerVision SPB350
▪ AVerVision M70	▪ AVerVision M50	▪ AVerVision 355AF
▪ AVerVision 300AF+	▪ AVerVision F50	▪ AVerVision F30
▪ AVerVision F15	▪ AVerVision W30	▪ AVerVision CP355
▪ AVerVision CP155	▪ AVerVision CP135	▪ AVerVision CP300
▪ AVerVision CP150	▪ AVerVision CP130	

Sphere Software (Old version)

Download for : [Windows](#) [Mac](#)

[Sphere Software \(v.1.1.1035.41\) !\[\]\(f1ee6d81bdeaf50ad3989e9a2b0d9b21_img.jpg\) - Windows](#)
[Sphere for Windows Server Deployment \(MSI\) \(v.1.1.1035.41\) !\[\]\(9ecb78e56cb69120e723e10b45976ebf_img.jpg\) - Windows](#)
[Sphere Release Notes \(v.1.1.1035.41\) !\[\]\(2c8cef1ad681cb48bee0833c4bcd334d_img.jpg\) - Windows](#)
[User's Manual !\[\]\(616b81d1d3ce4cd945729e2886c03c76_img.jpg\)](#)

2. Run the downloaded .exe to start the installation




3. Follow the setup wizard to install the Sphere software



4. After installation is completed, open the Sphere Software
5. Power on and connect your doc cam to your computer via USB cable

6. Select your visualizer within the software and you are now connected!
 - a. Note: If you are using an older AVer doc cam, be sure the toggle switch is set to the left for PC mode (only applies to certain older models)

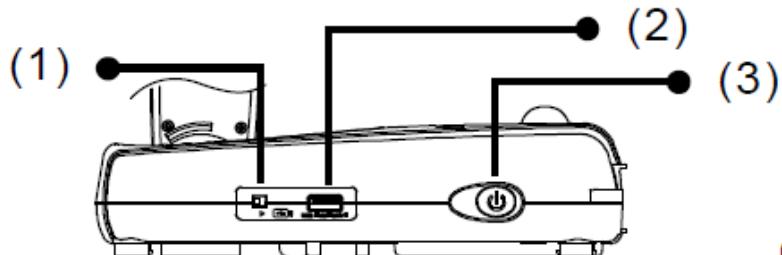

(fig. 1.2)

Name	Function
(1) USB Flash Drive switch	Switch to right (►) for audio video recording directly to a USB flash drive and left (◀) when connecting AVerVision M50 to a computer using a USB cable.
(2) USB Flash Drive port	Insert a USB flash drive for audio video recording.
(3) Power button	Turn the unit on/standby mode.

7. Select your visualizer within the software and you are now connected!

Using your AVer Document Camera with other platforms (Zoom, Skype, Google Hangout).



Refer to this table to see if your AVer Doc Cam is compatible with other platforms (if it isn't, refer to the list on the first page to download the corresponding software):

AVer Model	Chromebook Compatible (Sphere Lite App)	Video Compatible (UVC)	Audio Compatible (UAC)	Built-In MIC	HDMI out
U15	Yes	Yes	Yes	Yes	-
U50	Yes	Yes	Yes	Yes	-
U70	Yes	Yes	Yes	Yes	-
F15	Yes	Yes	No	No	-
F15HD/F33	Yes	Yes	Yes	Yes	Yes
F55	Yes	Yes	Yes	Yes	Yes
F50HD	Yes	Yes	Yes	Yes	Yes
F17HD+(ROW)	Yes	Yes	Yes	Yes	Yes
F17HD(US)	Yes	Yes	Yes	Yes	Yes
F50	No	No	No	Yes	-
F50U	Yes	Yes	Yes	Yes	-
M70	No	No	Yes	Yes	Yes
V315AF(ROW)	Yes	Yes	Yes	Yes	Yes
V300AFHD(US)					
PL50	No	No	Yes	Yes	Yes
VP-1HD	Yes	Yes	Yes	Yes	Yes
W30	No	No	No	No	-
W30HD	No	No	No	No	Yes
TABCAM	No	No	No	No	-
F70W	Yes	Yes	Yes	Yes	Yes
M70HD	Yes	Yes	Yes	Yes	Yes
V315AF+(ROW)	Yes	Yes	Yes	Yes	Yes
V300AFHD(US)					
355AF	No	No	No	Yes	No
M50					

Open up your software of choice and connect your AVer document camera to your computer via USB cable.

Select your AVer document camera as your visualizer and you are successfully connected!

(Please refer to Zoom, Skype, or Hangout user guides to navigate through their software)

Zoom:

<https://averusa.com/education/downloads/Zoom-Step-Guide.pdf>

<https://support.zoom.us/hc/en-us/articles/201362033-Getting-Started-on-Windows-and-Mac>

Microsoft Teams:

<https://averusa.com/education/downloads/MS-Teams-Step-Guide.pdf>

Skype:

<https://support.skype.com/en/skype/windows-desktop/start/>

Hangout:

<https://averusa.com/education/downloads/Google-Hangouts-Step-Guide.pdf>

<https://support.google.com/hangouts/?hl=en#topic=6386410>

Additional AVer Resources to help you teach from home:

<https://averusa.com/education/learn-from-home>

More Help

For FAQs, technical support, software and instruction manual download, please visit:

<https://www.averusa.com/education/support/>

Contact Information

AVer Information Inc.

www.averusa.com

668 Mission Ct. Fremont, CA 94539, USA

Toll-free: 1(877)528-7824

Local: 1(408)263-3828

Support.usa@aver.com