


Professional Tracking Camera

Quick Start Guide


Package Contents

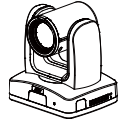

Camera Unit




Drilling Paper



Ceiling Mount Bracket (x2)




Quick Start Guide



Cable Fixing Plate




M2 x 4mm Screw (x3)



Power Adapter & Power Cord



1/4"-20 L=6.5mm Screw (x2)



Remote Control




M3 x 6mm Screw (x3)



DIN8 to D-Sub9 Cable




RS232 In/Out Y Cable




Cable Ties (x4)

Optional Accessories



Wall Mount Bracket





Camera Controller (CL01)

* For detail on optional accessories, consult your local dealer.


Camera Installation

- **Angle A:** less than 30°
- **Height B:** 2~3m from floor
- **Distance C:** longer than 3m away from podium
- **Position:** center of classroom
- **Distance between the camera and tracking target (presenter):**

| Optical zoom ratio ability | Upper body size | Full body size |
|----------------------------|-----------------|----------------|
| 12X | 3~16m | 3~28m |
| 16X | 3~30m | 4~55m |
| 21X | 3~40m | 4~65m |
| 30X | 3~44m | 3~76m |

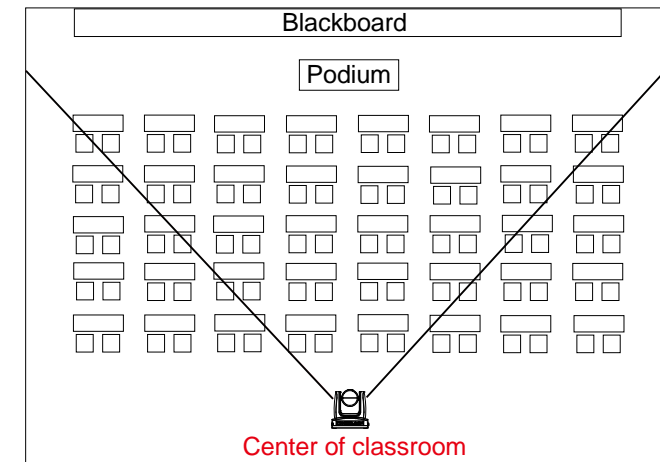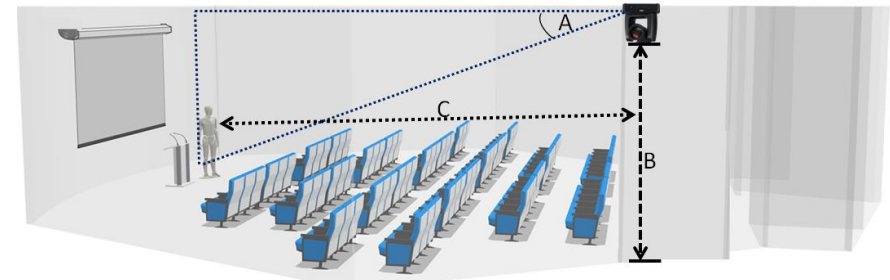

Overview

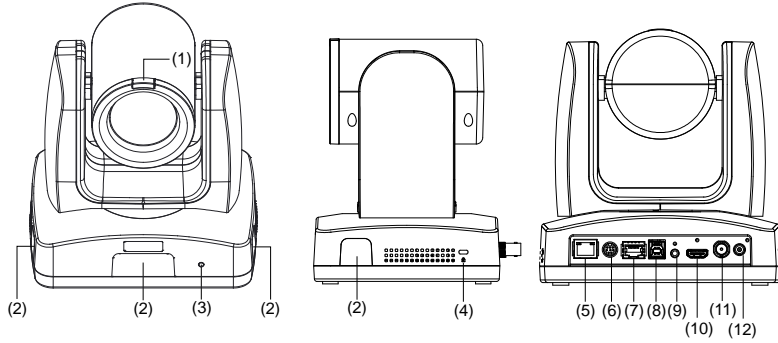


- (1) Tally Lamp
- (2) IR Sensor
- (3) LED Indicator
- (4) Kensington Lock
- (5) PoE+ IEEE 802.3AT
- (6) RS232 Port
- (7) RS422 Port
- (8) USB 3.0 Port (Type B)
- (9) Audio In
- (10) HDMI Port
- (11) 3G-SDI*
- (12) DC Power Jack

* The model names with "H" do not have this feature.


LED Indicator

| LED | Status | LED | Status |
|-----------------|------------------|-------------------|-----------------------|
| Blue (Blinking) | Auto Tracking on | Orange (Blinking) | Camera Initialization |
| Blue (Solid) | Normal Operation | Orange (Solid) | Standby |
| Red (Blinking) | FW Updating | | |

Connections

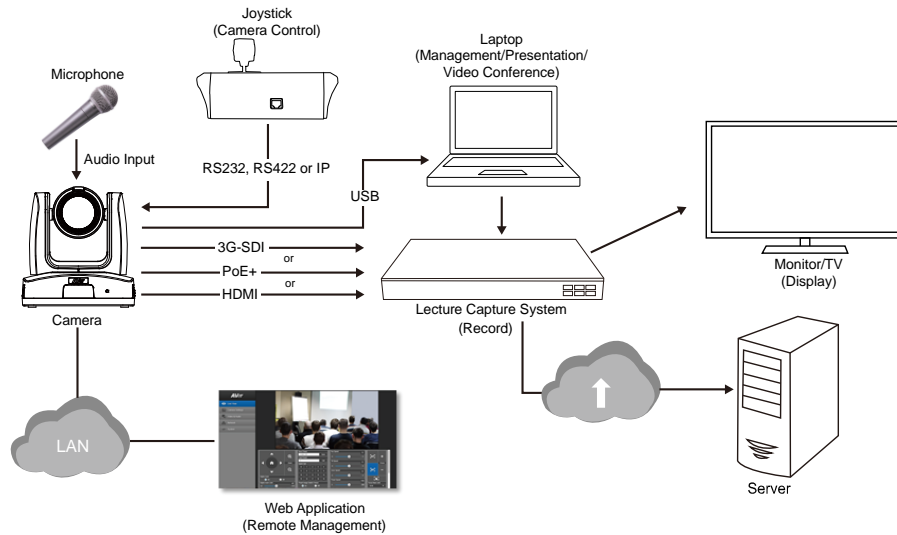


Dimensions

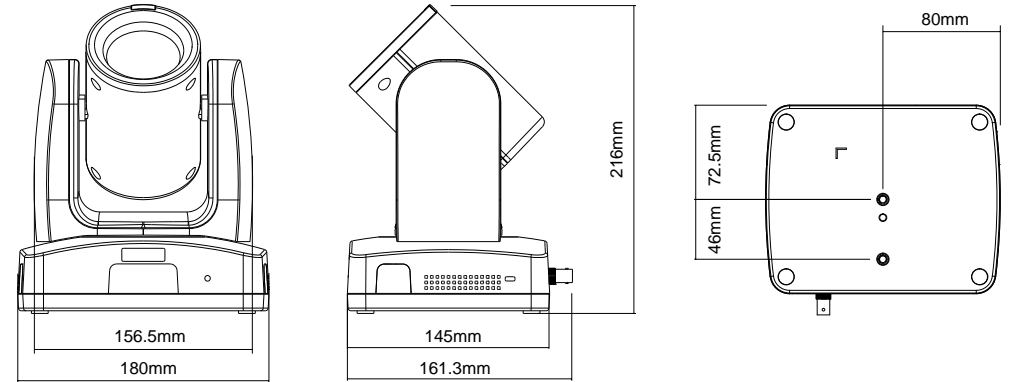


Cable Fixing Plate Installation


1. Secure the cable fixing plate to the camera with 3 M2 x 4mm screws (included in the package).

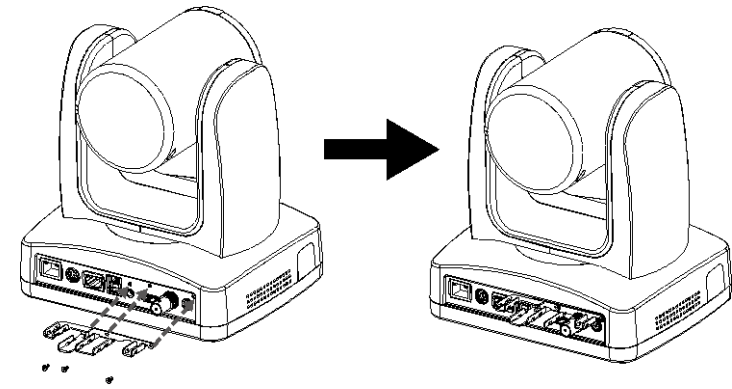





2. Plug in cables.

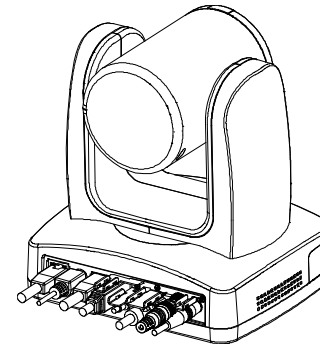

3. Use 4 cable ties to secure the cables and cable fixing plate.

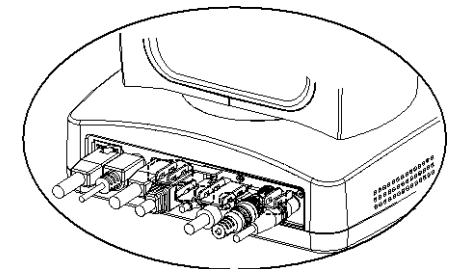

Ceiling Mount Installation
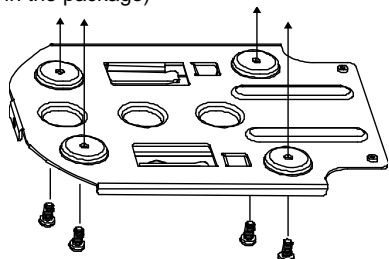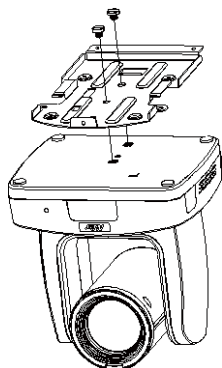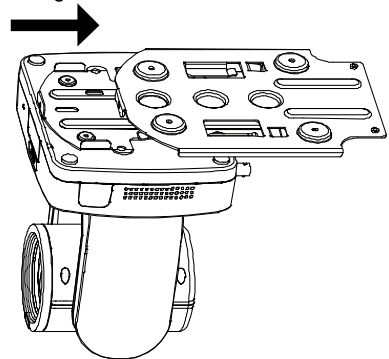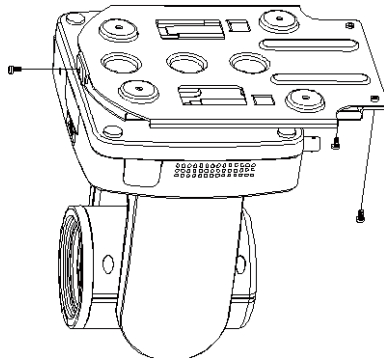
| | |
|--|---|
| <p>1. Secure the mount bracket on the ceiling. Screw: 4 screws, M4 x 10mm (Not Included in the package)</p>  | <p>2. Install the mount bracket on the camera. Screw: 2 screws, 1/4"-20 L=6.5mm (Included in the package)</p>  |
| <p>3. Slide the mount bracket with the camera into the mount bracket which secured on the ceiling.</p>  <p>[Note] Connect necessary cables after sliding the camera into the mount bracket.</p> | <p>4. Secure the camera with screws. Screw: 3 screws, M3 x 6mm (Included in the package)</p>  |

Remote Control


The remote controller requires two (2) "AAA" size batteries, make sure batteries are installed properly before use.

| | Name | Function |
|-------------------------|-------------------------|---|
| (1) Power | (1) Power | Turn the unit on/standby. |
| (2) Menu | (2) Menu | Open and exit the OSD menu. |
| (3) Camera Select | (3) Camera Select | CAM1 to CAM3 button Select a camera to operate. |
| (4) Numeric Pad | (4) Numeric Pad | <ul style="list-style-type: none"> ■ Use for setting the preset position 0~9. ■ Press number button (0~9) to move the camera to pre-configured preset position 0~9. |
| (5) Preset | (5) Preset | Press " Preset " + " Number button (0~9) " to set the preset position. |
| (6) Reset | (6) Reset | Press " Reset " + " Number button (0~9) " to cancel pre-configured preset position. |
| (7) WDR | (7) WDR | Turn on/off WDR function. |
| (8) BLC | (8) BLC | Turn on/off backlight compensation. |
| (9) ▲, ▼, ◀, ▶ | (9) ▲, ▼, ◀, ▶ | Pan and tilt the camera. |
| (10) Enter | (10) Enter | Access the OSD menu, confirm the selection or make a selection in OSD menu. |
| (11) PT Reset | (11) PT Reset | Reset the Pan-Tilt position. |
| (12) L/R DIR | (12) L/R DIR | Left and right orientation setting. <ul style="list-style-type: none"> ■ Press "L/R DIR" + "#1" button to reset setting. ■ Press "L/R DIR" + "#2" button to move to opposite direction. |
| (13) Zoom +/- | (13) Zoom +/- | Zoom in/out slowly. |
| (14) MF/Far/Near | (14) MF/Far/Near | Enable manual focus. Use Far/Near to adjust the focus. |
| (15) Zoom Fast +/- | (15) Zoom Fast +/- | Zoom in/out fast. |
| (16) Pan-tilt Fast/Slow | (16) Pan-tilt Fast/Slow | Pan-Tilt speed adjustment. |
| (17) AF | (17) AF | Auto focus. |
| (18) Auto Tracking | (18) Auto Tracking | Auto Tracking on/off. |
| (19) Freeze | (19) Freeze | Freeze the live image. |
| (20) EV +/- | (20) EV +/- | <ul style="list-style-type: none"> ■ Short press to adjust EV level. ■ Long press EV+ to turn on RTMP. ■ Long press EV- to turn off RTMP. |
| (21) Switch | (21) Switch | Change presenter. |
| (22) Tracking Point | (22) Tracking Point | When presenter enters this area, the camera will start tracking. |
| (23) Upper Body | (23) Upper Body | Presenter's size on screen is upper body. |
| (24) Full Body | (24) Full Body | Presenter's size on screen is full body. |


Tracking Point Setup

Set up a tracking point as a start point of auto tracking. In general, tracking point is set at position of speaker and when camera detects people show at tracking point, camera will start to tracking. Also, when tracking is lost, camera will go back to tracking point after few seconds.


1. Press **MENU** button on remote control to call out OSD menu.
2. Go to **Network > DHCP > On**. Then, go to **System > Information** to check IP address of the camera.

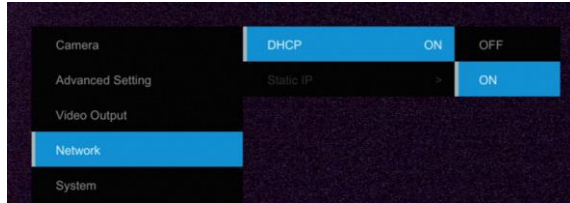

3. Next, open the browser on your PC/laptop, enter the IP address of the camera, and connect to camera (Default login account and password are **admin/admin**). User should see the camera Web UI.

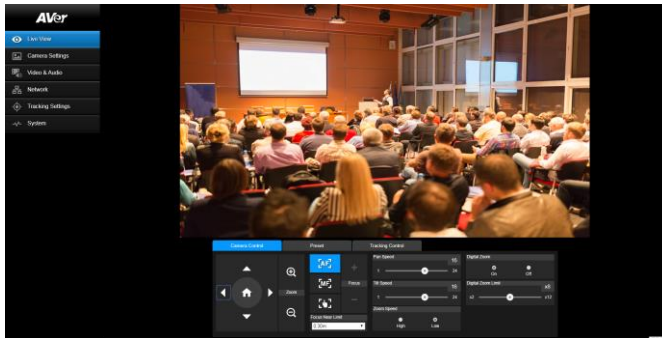

4. Select **Tracking Settings > Presenter**. Use **▲, ▼, ◀, ▶, ⊕** and **⊖** to set the camera position, then, select **Save to Preset 1** to save the tracking point. For more detail about setting of tracking, please refer to user manual.

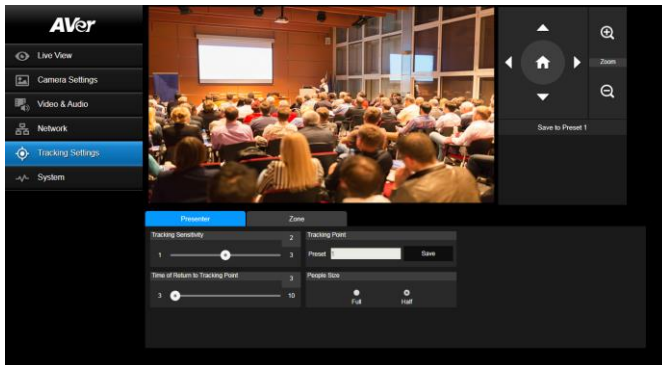

Federal Communication Commission Interference Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radiofrequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules.

The Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Warning: This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

限用物質含有情況標示資訊參考下列網址：<https://tw.aver.com/page/RoHS>

Caution

- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries in a safe and proper manner.

©2022 AVer Information Inc. All rights reserved.

All rights of this object belong to AVer Information Inc. Reproduced or transmitted in any form or by any means without the prior written permission of AVer Information Inc. is prohibited. All information or specifications are subject to change without prior notice.

Contact Information

Headquarters

AVer Information Inc.
<https://www.aver.com>
8F, No.157, Da-An Rd.
Tucheng Dist., New Taipei City
Taiwan
Tel: +886 (2) 2269 8535

USA Branch Office

AVer Information Inc.
<https://www.averusa.com>
668 Mission Ct.
Fremont, CA 94539, USA
Tel: +1 (408) 263 3828
Toll-free: +1 (877) 528 7824
Technical support:
support.usa@aver.com

Europe Branch Office

AVer Information Europe B.V.
<https://www.avereurope.com>
Westblaak 134, 3012KM,
Rotterdam, The Netherlands
Tel: +31 (0) 10 7600 550
Technical support:
eu.rma@aver.com

Japan Branch Office

アバー・インフォメーション株式会社
<https://jp.aver.com>
〒160-0023 日本東京都新宿区西新宿
3-2-26 立花新宿ビル 7 階
Tel: +81 (0) 3 5989 0290
テクニカル・サポート:
VCInfo.JP@aver.com

Vietnam Branch Office

Công ty TNHH AVer
Information (Việt Nam)
Tầng 5, 596 Nguyễn Đình
Chiểu, P.3, Quận 3, Thành
phố Hồ Chí Minh 700000, Việt
Nam
Tel: +84 (0)28 22 539 211